

luce

BAMBINI 07 COLLECTION

UNITED COLORS
OF BENETTON.

BAMBINI 07 COLLECTION




Thank you for purchasing a product from the United Colors of Benetton Bambini 07 collection. The UCB Bambini collection is innovative, the design a mix of colour and detail. This collection is for the fashion conscious parent. Parents who enjoy the spirit of colour and the United Colors of Benetton style. Bambini 07 will show the world how colourful life is with kids!

Produced and distributed under license for Bencom s.r.l. by Born with Style www.bornwithstyle.com.au

Please take a moment to read through these instructions before you use your United Colors of Benetton Stroller.

- Never leave your child unattended while in stroller.
- To prevent choking hazard, remove and discard all packing material before using this product.
- Always use restraint system to keep child from standing up or falling out of the stroller. Use the harness at all times.
- Always balance the weight of the stroller evenly, do not hang shopping bags or other heavy objects on the handles.
- Always lock the stroller open before allowing your child in or near the stroller.
- This stroller is suitable for children from newborn to approximately 3 years of age (maximum weight 15kg)
- Put on all brakes whenever you park the stroller and when you place your child in the stroller.
- Never use this stroller on stairways or escalators.
- Always check that accessories are securely fastened before using the stroller.
- Do not allow children to stand on seat or sit on footrest.
- This is not an exercise stroller. Do not use product while running, jogging or participating in other athletic activities.
- Do not put child in basket.
- Do not carry extra children or use accessories other than those approved by the manufacturer.
- The stroller should not be used near an open fire or exposed flame.
- Make sure children are clear of any moving parts if you adjust the stroller, otherwise they may be injured.
- Before every use, check that the stroller has been folded out correctly and that all fastening clamps are firmly secured.
- Maximum permissible weight in the basket is 3kg.

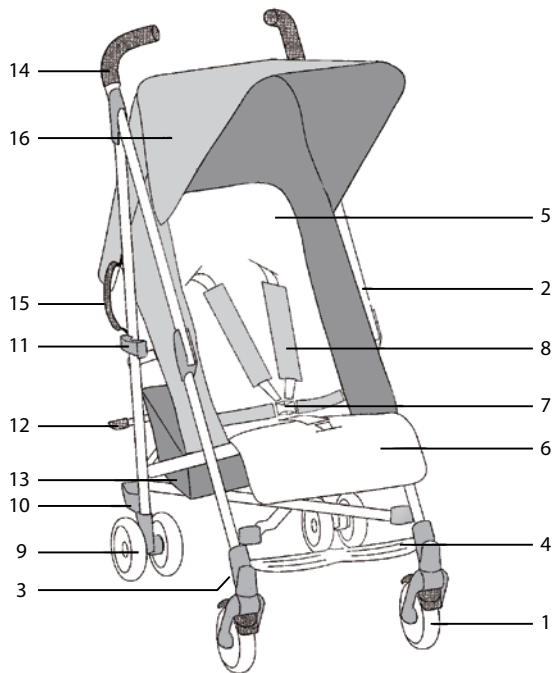


- 1 - Front castors
- 2 - Top frame
- 3 - Castor blockers
- 4 - Foot rest
- 5 - Back rest
- 6 - Leg support
- 7 - 5-point safety harness
- 8 - Shoulder protectors
- 9 - Rear wheels
- 10 - Brake
- 11 - Fold-lock
- 12 - Safety-lock
- 13 - Basket
- 14 - Handles
- 15 - Carrying handle
- 16 - Canopy


Contents of the box:

- 1 Frame with basket and stroller upholstery with safety harness
- 2 Shoulder protectors
- 1 Canopy


Remove any cardboard inserts or plastic ties used to protect the product during shipment.

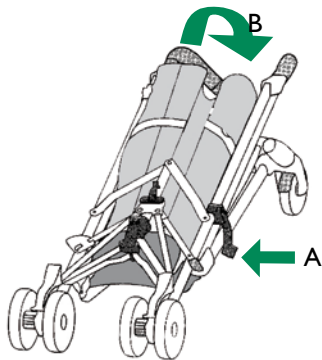

- 1 To unlock the stroller, unfasten the handle on the side (A) Move the handles up and fold out the stroller (B).

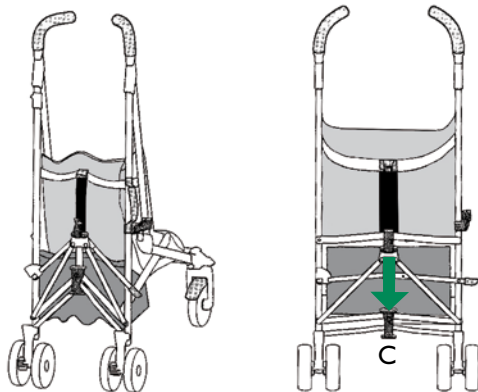


- 2 Move the locking pedal (C) located on the back rest down with your foot, until it clicks into place.

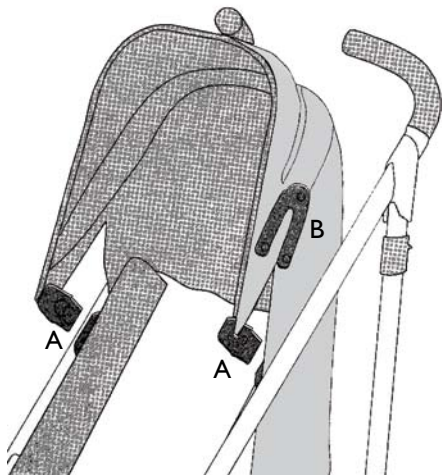


- 1 Insert both clips of the canopy into the appropriate holes in the top frame until they lock (A).
- 2 Fasten the 4 velcro straps to the 4 velcro strips on the back of the stroller upholstery. Move the 2 plastic tensioners (B) on both sides of the canopy down in order to open the canopy.

TO REMOVE CANOPY:

Press both sides of the appropriate buttons on the clips and pull the canopy out of the holes.



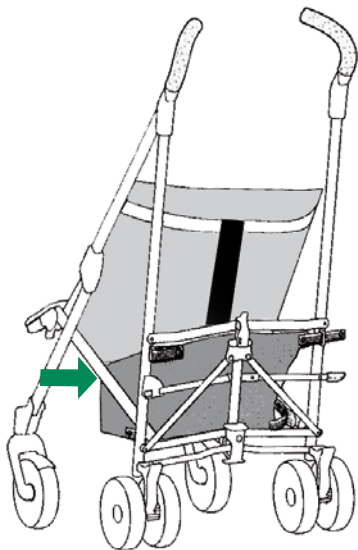


- 1 If you wish to remove the basket, unfasten the 4 straps on the back of the stroller and the 2 straps on the front.
- 2 When you wish to reattach the basket carefully fasten the straps back in the appropriate place.

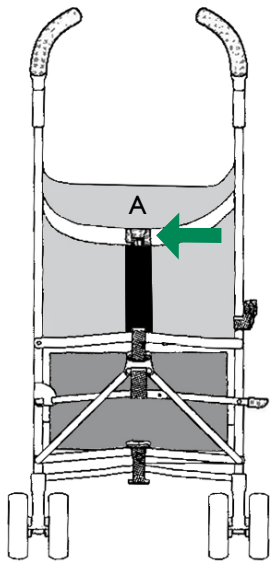

- 1 To move the backrest back down pull up on the latch (located at the top of the backrest A) and move the seat down until it clicks into place.
- 2 To move the back rest forwards, push the backrest up until it clicks into the desired position.

- 1 Lock foot brake.
Place child in stroller.

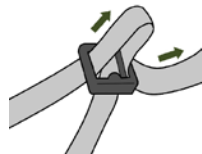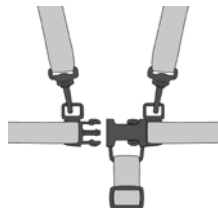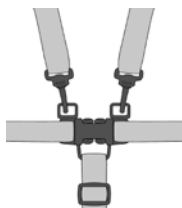


- 2 Hook shoulder straps to waist belt.


- 3 To lock harness push the two ends of the straps into the buckle. Be sure both ends are fully inserted. To unlock harness press the tabs together and then slide them from the buckle.

- 4 For proper fit, adjust shoulder straps and waist band as shown.


NOTE: For a secure fit, straps should be at or above the child's shoulder. Adjust straps to higher position as your child grows.

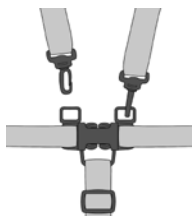


1 Un-hook shoulder strap from waist belt as shown.

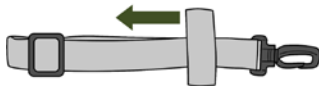


2 Pull shoulder strap through the webbing as shown.

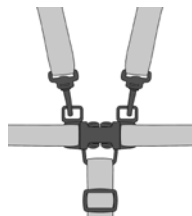

3 Hook the shoulder straps to waist belt. Repeat for second strap.

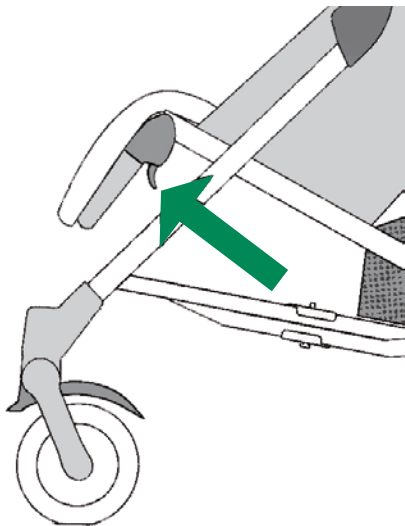

- 1 To move the leg support down, lift the pull buttons on the back of the leg support up move the leg support down.
- 2 To move the leg support up, lift the leg support up until it clicks into place.

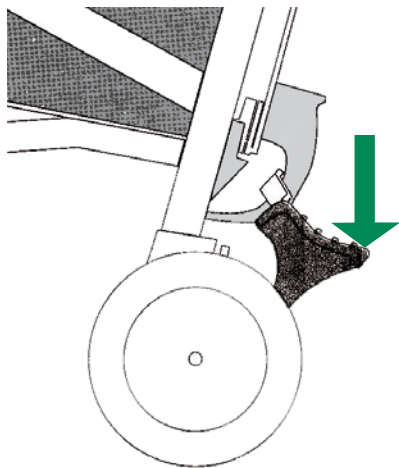


1

Push down on the brake pedals on the back wheels with your feet to lock the brake.

2

Push up on the brake pedals on the back wheels with your foot to unlock brake.

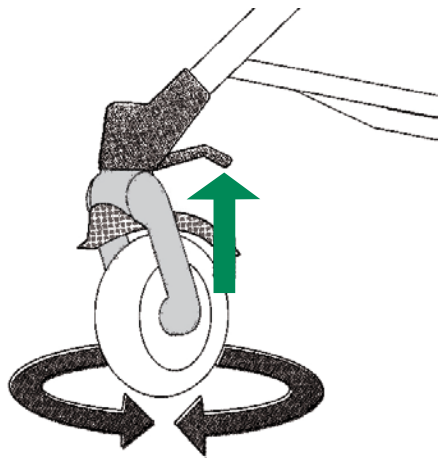


1

Move the handles on the back of the front wheels up. The front castors can now swivel.


2

Blocking the castors: Move both handles on the back of the front castors down, the swivel setting locks automatically when the front wheels are moved back into their original, straight position.

To fold the stroller remember to lock the brakes, move the back rest to the most vertical position and fold the canopy back.

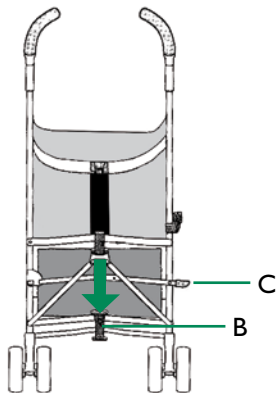

1 Lift the locking pedal up with your foot (B). Push the extra locking catch (C) down with your foot. The frame is now unlocked.

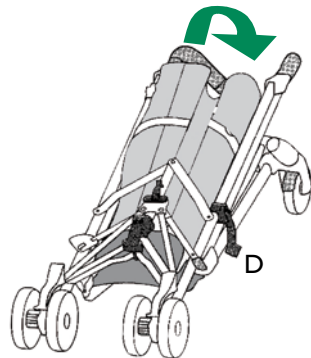

3 Move the handles forwards to fold the frame up. Lock the handle on the side (D).

Born with Style

PO Box 789

Gladesville NSW 1675 Australia

P: 1300 855 337 or 02 9816 3837

E: info@bornwithstyle.com.au

W: www.bornwithstyle.com.au

For spare parts, repairs or warranty issues, please contact:

Karlisles

P: 1300 308 435

E: info@karlisles.com.au

W: www.karlisles.com.au

Replacement parts provided by local distributor due to accidental damage or misuse will be charged accordingly.

This product meets and exceeds Australian Standard AS/NZS 2088:2000.

Born With Style recommends that you keep a record of important information about your United Colors of Benetton stroller. Please complete the information in the space provided.

Model Number:

Date of Manufacture:

Date of Purchase:

There are many ways to look after and protect your United Colors of Benetton stroller. The most important is to clean up any spills or food, before it dries on the fabric.

As the covers are not designed to be easily taken off for washing, (for safety reasons) the easiest method to clean is to sponge the surface with a damp cloth. If stains persist try warm water and laundry detergent. Leave to dry out of direct sun.

Sand and Salt water should be rinsed with a hose and wiped dry to prolong the life of the wheels, axles and other moving parts. Never use petroleum based lubricants on your stroller, the most suitable lubricants are silicone based products.

Born With Style warrants this product to be free of defects in materials and workmanship as follows: For a period of ONE YEAR from the date of purchase, Born With Style will repair or replace, at its option, the defective product. This warranty is given in addition to (and not in substitute for) applicable statutory rights which you may have.

We sincerely thank you for purchasing this Born With Style product.

For further information visit:
www.bornwithstyle.com.au

