

stella

BAMBINI COLLECTION

UNITED COLORS
OF BENETTON.

BAMBINI COLLECTION

 


Thank you for purchasing a product from the United Colors of Benetton Bambini collection. The UCB Bambini collection is innovative, the design a mix of colour and detail. This collection is for the fashion conscious parent. Parents who enjoy the spirit of colour and the United Colors of Benetton style. The Bambini Collection will show the world how colourful life is with kids!


Produced and distributed under license for Bencom s.r.l. by Born with Style www.bornwithstyle.com.au

Please take a moment to read through these instructions before you use your United Colors of Benetton Stroller.


- Never leave your child unattended while in stroller.
- To prevent choking hazard, remove and discard all packing material before using this product.
- Always use restraint system to keep child from standing up or falling out of the stroller. Use the harness at all times.
- Always balance the weight of the stroller evenly.
- Always lock the stroller open before allowing your child in or near the stroller.
- The stroller is designed for children from birth to 18kg (3 years of age approximately).
- Put on all brakes whenever you park the stroller.
- Never use this stroller on stairways or escalators.
- Do not allow children to stand on seat or sit on footrest.
- This is not an exercise stroller. Do not use product while running, jogging or participating in other athletic activities.
- Do not put child in basket.
- Do not carry extra children or use accessories other than those approved by the manufacturer.
- The stroller should not be used near an open fire or exposed flame.
- Make sure children are clear of any moving parts if you adjust the stroller, otherwise they may be injured.
- Do not put more than 3 kg in the basket.

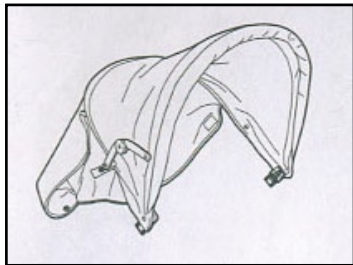


Canopy

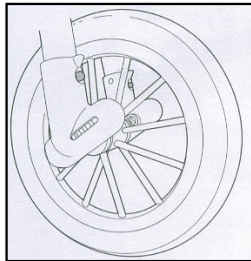 


Front wheel

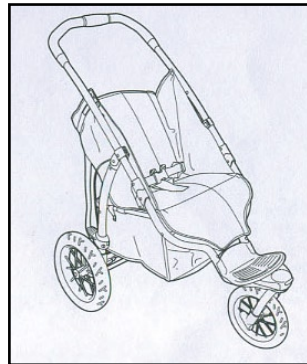

Stroller

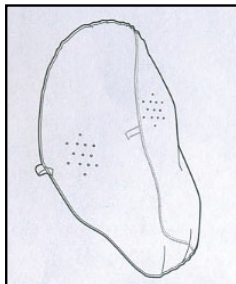 

Raincover



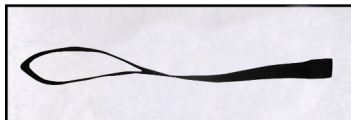 


Wrist Strap




Footplate

1 **WARNING:** Ensure that all the locking devices are engaged before use.

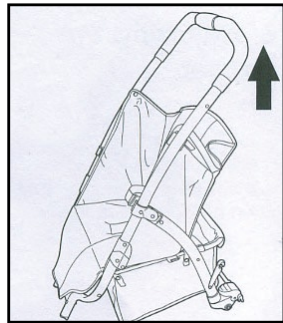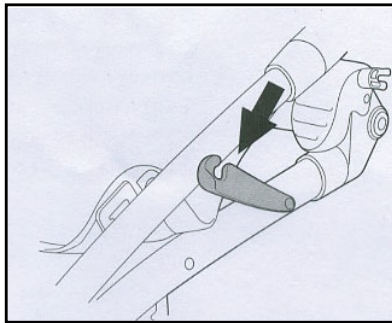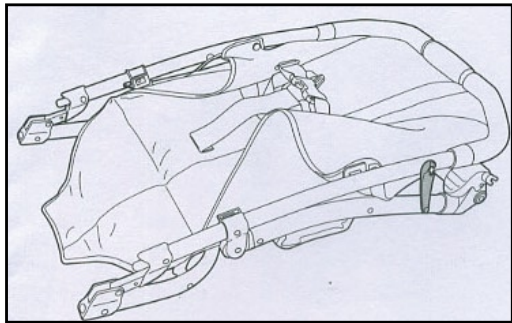


2 Unfasten the catch on the side of the frame.


3 Lift up the handles until the frame locks open.

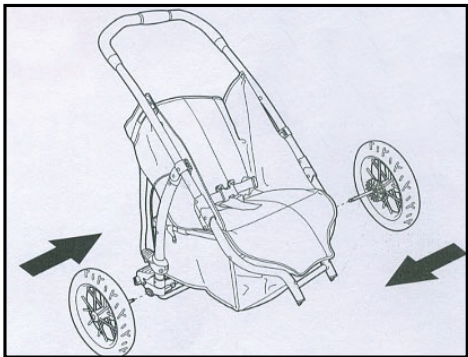


- 1 Slot the spindles in the rear wheels into the holes in the back axle. Push them in until they click into position. Ensure they are correctly fitted by attempting to pull them from the frame.

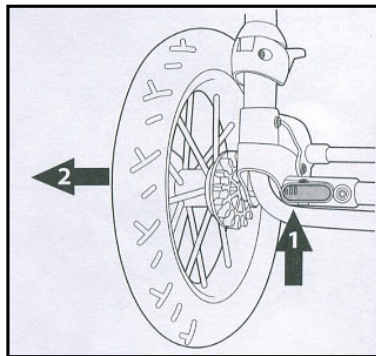


- 2 **REMOVING THE WHEELS:**
 1. Locate the release button and press.
 2. Pull the rear wheel out.

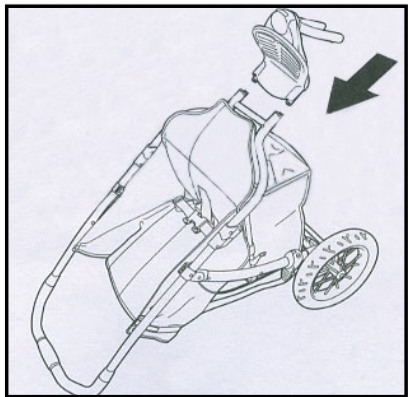


- 1 Slot the foot plate and forks assembly onto the front legs. Push the assembly into position.

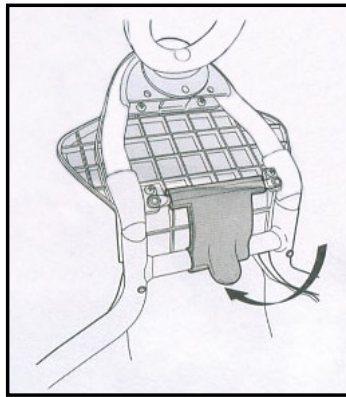


- 2 Locate the plastic catch on the underside of the footplate. Rotate it over and attach it to the section of the frame that connects the front legs. Ensure that the assembly is locked in position before attaching the front wheel.

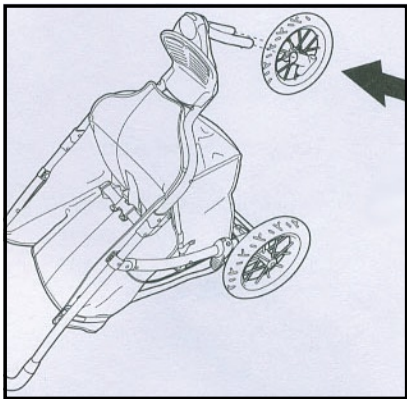


1 Align the plastic sockets on the front wheel with the forks. Push them onto the forks.

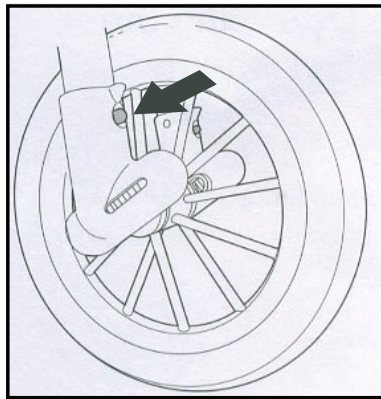

2 Keep pushing until the two metal studs on the forks protrude through the holes in the plastic sockets to lock the front wheel in place.

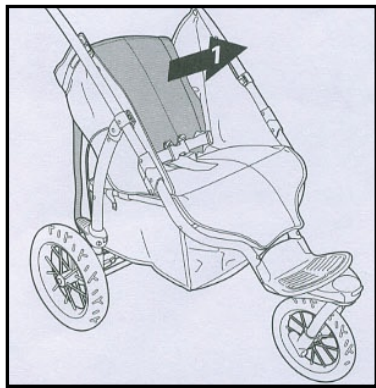


1 RAISING THE BACKREST: Push the backrest up until it is in the desired position.

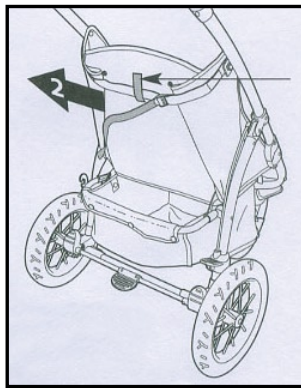


2 Pull the end of the backrest adjustment strap until all of the slack is removed and the backrest is held firmly in place.

Fasten the end of the strap onto the velcro strip after adjustments.

LOWERING THE BACKREST: Loosen the backrest adjustment strap through the buckle and lower the backrest to the required position.

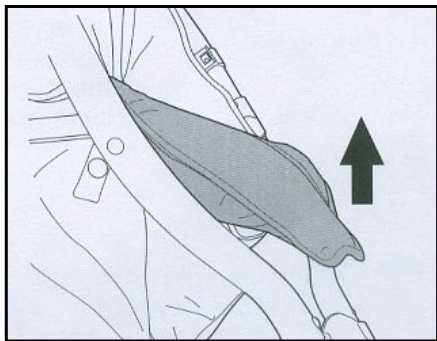


1 RAISING THE LEG REST: Lift the legrest up into the horizontal position.

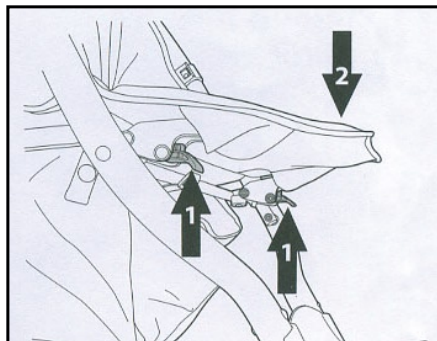


2 LOWERING THE LEG REST:
1. Lift the two catches under the legrest.
2. Lower the legrest.




- 1** Slot the two clips on the sides of hood into the slots on the frame.

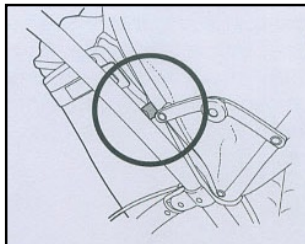


- 2** Attach the two press studs on the straps on the sides of the hood to the studs on the frame.

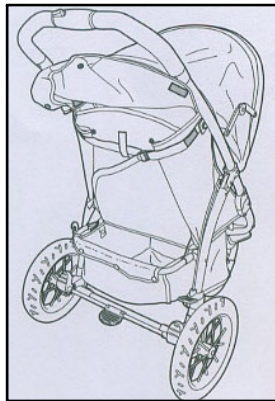

- 3** Attach the two velcro pads and the two studs on the hood to the backrest.

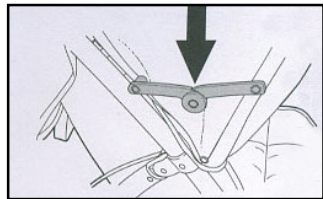


- 4** Push down the two tensioning bars on the sides of the hood to lock it open.

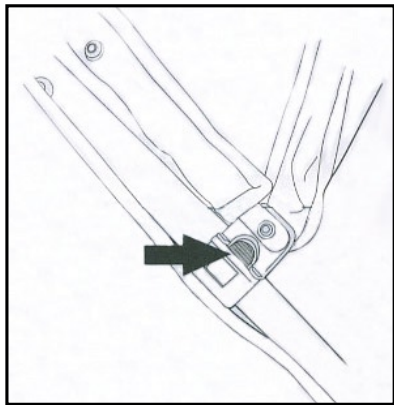


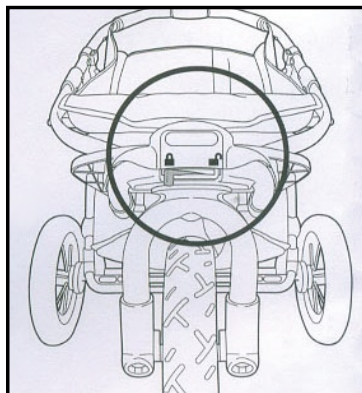
- 1 Unfasten the two velcro pads and four press studs attaching the hood to the seat. Press the buttons on the two hood clips.




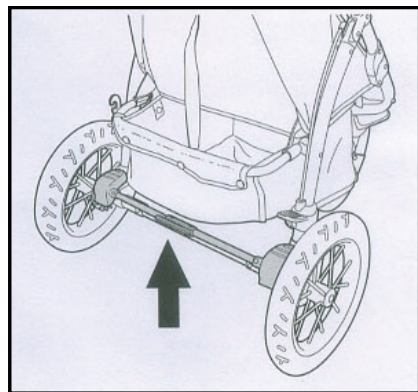
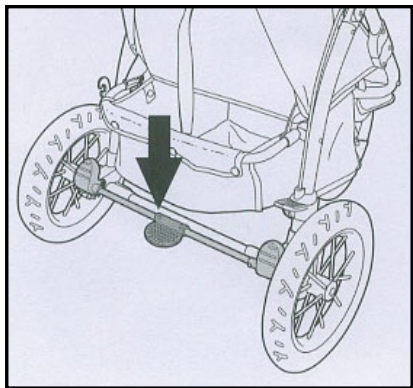
- 2 With the buttons held down pull the hood from the frame.

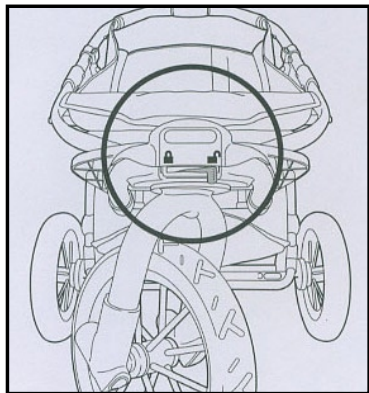

- 1 UNLOCKING THE WHEELS:**
Move the swivel lever to  to allow the front wheel to swivel.



- 2 LOCKING THE WHEELS:**
Move the swivel lever to  to lock the front wheel.



1

TO LOCK BRAKE:


Push down the brake pedal.

2


TO UNLOCK BRAKE:

Lift up the brake pedal.

PLEASE NOTE: For added security, we recommend that parents use wrist restraint strap provided to prevent the stroller from rolling away.

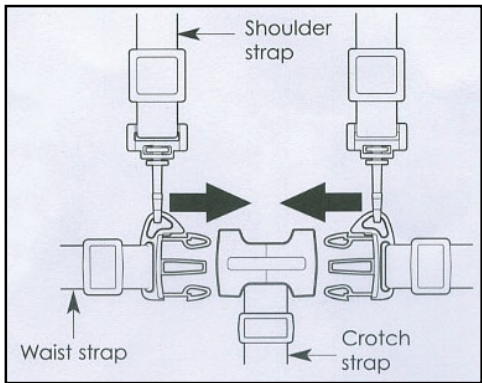


1 **LOCKING THE HARNESS:** Push the two tongues on the ends of the waist straps into the buckle on the end of the crotch strap.

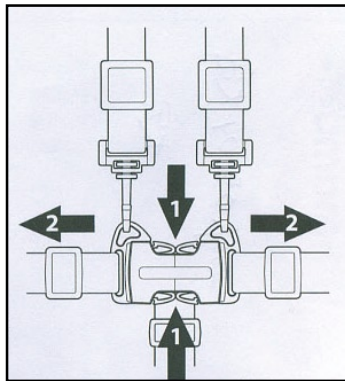


2 **UNLOCKING THE HARNESS:**
 1. Squeeze the tongues together and then slide them from the buckle.
 2. Your child can now be removed from the stroller.

IMPORTANT:
 Always ensure that the harness is correctly fitted and adjusted. Use the buckles to adjust the harness for a snug fit.

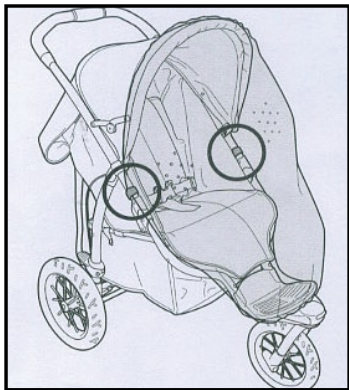

1


Fit the hood, see page 10. Position the raincover on the stroller with the velcro straps nearest the handlebars. Fit the elasticated rim around the edge of the hood and around the footplate.

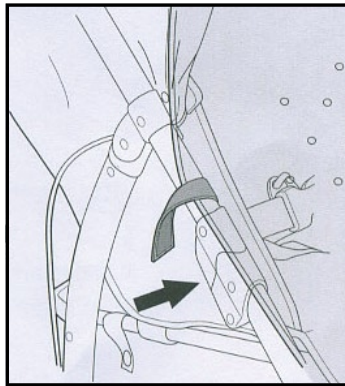


2

Attach the two velcro straps around the middle of the frame.


Before folding the stroller, remember to lock the brakes (P. 13), raise the seat back (P. 8) and close the canopy.

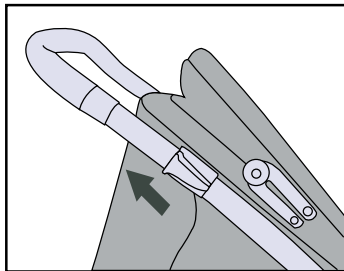


1 Pull up the latch on both sides of the stroller simultaneously.

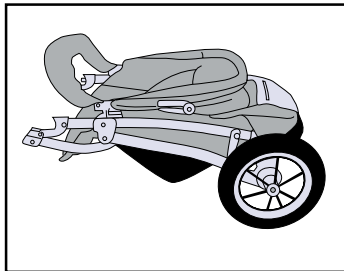

2 Push the handlebar down to fold the frame.

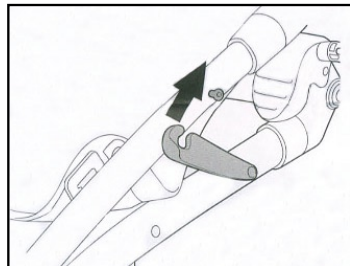


3 Fasten the catch on the side of the frame.

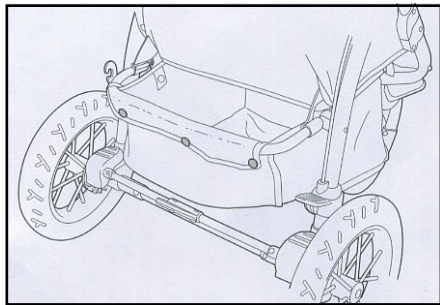

1

Unfasten the three press-studs on the back edge of the basket.

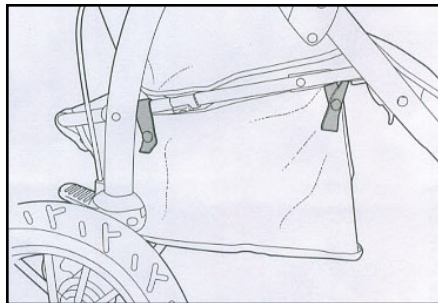

2

Unfasten the four press-studs on the sides of the basket.

The basket can now be removed from the frame.

There are many ways to look after and protect your United Colors of Benetton stroller. The most important is to clean up any spills or food, before it dries on the fabric.

As the covers are not designed to be easily taken off for washing, (for safety reasons) the easiest method to clean is, sponge the surfaces with a mild solution of warm water liquid laundry detergent. Rinse well with clean sponge and leave to dry out of direct sun.

Sand and salt water should be rinsed with a hose and wiped dry to prolong the life of the wheels, axles and other moving parts.

Never use petroleum based lubricants on your stroller, the most suitable lubricants are silicone based products.

Born With Style warrants this product to be free of defects in materials and workmanship as follows: For a period of ONE YEAR from the date of purchase, Born With Style will repair or replace, at its option, the defective product. This warranty is given in addition to (and not in substitute for) applicable statutory rights which you may have.

We sincerely thank you for purchasing this Born With Style product.

For further information visit:
www.bornwithstyle.com.au

For spare parts, repairs or warranty issues, please contact:

Karlisles

P: 1300 308 435

E: info@karlisles.com.au

W: www.karlisles.com.au

Replacement parts provided by local distributor due to accidental damage or misuse will be charged accordingly.

Born with Style
PO Box 789
Gladesville NSW 1675 Australia

P: 1300 855 337 or 02 9816 3837
E: info@bornwithstyle.com.au
W: www.bornwithstyle.com.au

This product meets and exceeds Australian Standard AS/NZS 2088:2000

Born With Style recommends that you keep a record of important information about your United Colors of Benetton stroller. Please complete the information in the space provided.

Model Number:

Date of Manufacture:

Date of Purchase:

