

# Model

## Compact Highchair

### Features:

- Strong and durable with a practical design.
- Compact and easy to fold for storage and transport.
- Large removable tray with three-position adjustment.
- Lockable footrest for baby's comfort.
- Padded PVC seat for easy cleaning.
- Safety harness to secure baby.

### Additional products and accessories available in leading department stores and nursery speciality shops include:-

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers and Wooden Cots.

### Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damages arising from neglect, accidental damage to, or misuse of the product.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products, the illustrations used in this instruction manual are generic.

 
**This product is not intended for commercial use.**



Childcare Nursery Products Pty Ltd  
20-22 Lindaway Place Tullamarine Vic 3043  
Phone: 03 9335 2244 Fax: 03 9335 2270  
email: sales@childcareproducts.com.au  
www.childcareproducts.com.au

# Compact Highchair

042400



# Instruction Booklet



Keep this booklet in a safe place for future reference  
Note: Colour and features of product may differ from the diagrams shown

www.childcareproducts.com.au

## WARNING

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- NEVER LEAVE YOUR CHILD UNATTENDED.
- ALWAYS KEEP CHILD IN VIEW WHILE IN HIGHCHAIR.
- ALWAYS SECURE CHILD IN THE RESTRAINT.
- NOT RECOMMENDED FOR A CHILD UNDER SIX MONTHS OLD.
- PREVENT SERIOUS INJURY OR DEATH FROM FALLS OR SLIDING OUT.
- THE CHILD SHOULD BE SECURED IN THE HIGHCHAIR AT ALL TIMES BY THE RESTRAINING SYSTEM.
- THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE CHAIR.
- IT IS RECOMMENDED THAT THE HIGHCHAIR BE USED ONLY BY CHILDREN CAPABLE OF SITTING UPRIGHT UNASSISTED.

### Some Do's and Dont's

- Check that all safety locks are engaged before placing a child in the highchair.
- Only use the highchair on a secure level surface.
- Do not allow children to stand on the seat or footrest or climb into or out of the highchair.
- When adjusting the highchair, make sure that parts of your child's body are clear of any moving parts.
- Do not carry the highchair with a child in the chair.
- Keep the highchair away from hazards that a child could reach such as electric cords, stoves and hotplates.
- Periodically check that all parts of the highchair are in good working order.
- Do not use the highchair if it is damaged or broken.
- The weight of the child using this highchair should not exceed 17kgs.
- Avoid crushing the highchair when storing or loading into a car.
- Promptly replace worn out or broken parts.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.

## Assembly Instructions

### To Assemble the Chair Legs

- Insert the front legs with matching "FR" as shown in Fig 1.
- Insert the rear legs with matching "RR" as shown in Fig 1.



 
## Operating Instructions

### To Open the Highchair

- Lift the backrest and seat in the direction of the arrows until the highchair is fully opened.



- Press down firmly on the frame hinge until it is locked into place. Your highchair is ready for use.

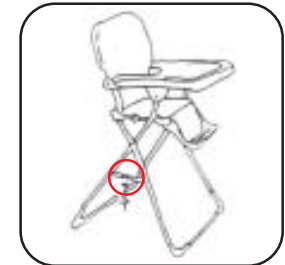

### Folding The Highchair

- Lift the frame hinge and release wire as indicated.



- Push backrest and seat in the direction of the arrows shown until the highchair is folded.



 
## Operating Instructions

### Restraints

To secure the child in the harness, push buckle **A** and **B** into the buckle housing **C** until the buckle prongs snap into position.

Carefully adjust the waist harness by pulling the slider **D** until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages.

Always adjust the harness when changing seating positions.

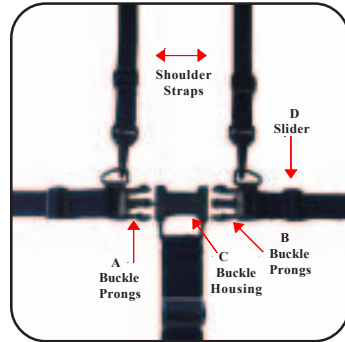

**Warning:** Many unrestrained children suffer injuries falling from highchairs. Use safety harness at all times.

### Adjusting the Tray

- Lift the side latches and move the tray to the desired position



## How to Care for your Childcare Highchair

### Care and Maintenance

To prolong the life of your nursery product, keep it clean and do not leave in direct sunlight for extended periods of time.

You can clean all parts of your highchair using warm water, use a nail brush sparingly on inground dirt and a household soap or mild detergent. Allow it to dry fully, preferably away from direct sunlight.

### Helpful Hints

#### Do Not Dry Clean or Bleach Your Fabrics.

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.