

Model

Jungle Walker

Features:

- Meets latest American Stair Standard (ASTM) F977-00 and the Australian Toy Standard AS/NZS 1647.
- Safety features include brake pads on underside to prevent walker dropping down stairs / steps.
- Deluxe plastic tray for food or toys.
- Padded removable and washable seat with support strap for extra stability.
- Four wheels for better stability.
- Listen and learn activity tray.
- Easy to fold flat for storage and transport.
- Five position height adjustment with safety lock.

Additional products and accessories available in leading department stores and nursery speciality shops include:-

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers and Wooden Cots.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damage arising from neglect, incorrect assembly, accidental damage to, or misuse of the product.

This product is not intended for commercial use.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products, the illustrations used in this instruction manual are generic.

 


Australian Enquiries

Childcare Nursery Products Pty Ltd
20-22 Lindaway Place Tullamarine Vic 3043
Phone: 03 9335 2244 Fax: 03 9335 2270
email: sales@childcareproducts.com.au
www.childcareproducts.com.au

Jungle Walker

022150



Instruction Booklet



Keep this booklet in a safe place for future reference

Note: Colour and features of product may differ from the diagrams shown

www.childcareproducts.com.au

WARNING

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- NEVER LEAVE YOUR CHILD UNATTENDED. ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER.
- USE ONLY ON FLAT SURFACES FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER.
- TO AVOID BURNS, KEEP THE CHILD AWAY FROM HOT LIQUID, RANGES, RADIATORS, SPACE HEATERS, FIREPLACES, ETC.
- TO AVOID SERIOUS INJURY OR DEATH, BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER.

Some do's and dont's

- Check that all safety locks are engaged before placing a child in the walker.
- This walker should not be used by a child who can walk unaided.
- This walker should not be used by a child who cannot sit unaided.
- This walker should not be used by a child weighing less than 8kgs and 65cm in height.
- A child should discontinue using this walker when weighing more than 11kgs and 82cm in height.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- Electrical cords, heaters, fireplaces and other hot objects, or any other objects or substances that may be dangerous, should be guarded or put out of reach of a child using the walker.
- Promptly replace worn out or broken parts.
- The walker should not be used (whether indoors or outdoors) on surfaces that have any obstructions that could cause the walker to tip over.
- The walker should not be carried with a child in it
- Adjust the height of the walker so that both feet of a child in the walker should be able to touch the ground.
- Always engage the safety locks once the walker height is correctly adjusted.
- Care must be taken while folding and unfolding the walker to prevent fingers being caught.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.

Assembly Instructions

 
 
To Open the Baby Walker

- Hold the top tray with both hands and gently lift upwards until it locks into its highest position.




To Attach the Seat

- Place three pegs in holes on front of seat housing and push down until locked into place.
- Push four straps through rear of the seat until the clips come through the housing to lock into position.

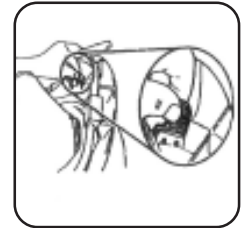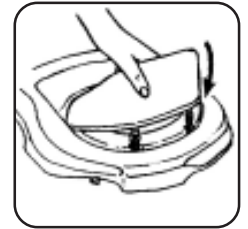


To Attach the Safety Strap

 - From the underside of tray pass the 'D Ring' through the guide under the seat. Then push the 'D' ring through the rear slot of the adjustment housing. Attach strap through the 'D Ring' to secure (as shown).

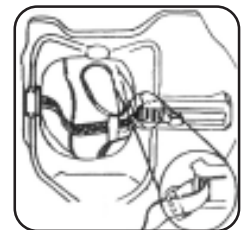

To Insert the Wheels

 
- Turn the walker upside down and place base of walker on a flat surface. Insert the pin of the wheel into hole and secure.

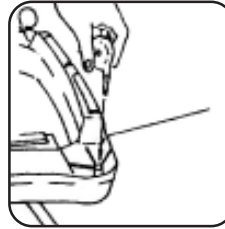

To Adjust the Height


- Press the button underneath the tray and lower or raise the height as required then twist knob 90° to lock into position.

 Warning: Do not place your child in the walker unless the safety button is secure.

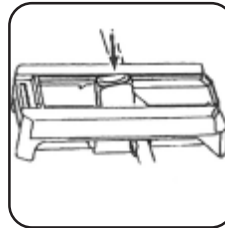

To Attach the Activity Tray

 - Insert clips on bracket at either side of tray. Press firmly on the upper tray until bracket is secure under the tray housing.

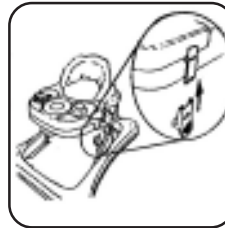

To Close Baby Walker

- Turn the safety button under the tray 90° to unlock then press button and lower gently.



How to Care for your Childcare Walker

Care and Maintenance

To prolong the life of your nursery product keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

Helpful Hints

If the wheels squeak –use a silicon based spray ensuring it penetrates the wheel assembly.

Do Not Dry Clean or Bleach Your Fabrics.

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.