

Congratulations on your purchase of the Childcare Twin Rover Stroller. This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference. To ensure that you receive the best service and warranty from CNP Brands, please remember to complete and return the warranty card as soon as possible.

contents

Assembly contents list
Assembly instructions
Stroller operation
Product care and maintenance

Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

assembly contents

Check what you have received...

You have received 1 box. Please check the contents of the box against the list below. If anything is missing, please contact CNP Brands Customer Service on 1300 667 137.

1 stroller frame

supplied loose in box:

3 front dual swivel wheels

1 hood



assembly instructions

To open and assemble the stroller

- 1 Hold the stroller by the handles and release the storage latch.
- 2 Hold the handles and allow the front legs to drop towards the floor. Do not try to open the stroller by forcing the handles apart.
- 3 Push down on the lower locking bar until frame is fully opened and locked. (Check that both the upper and lower locking bar are fully engaged)



To assemble front swivel wheels

- 1 To assemble the wheel, press it firmly onto the front legs. Push until wheel clicks into position. Pull back on wheel to ensure that it is secure.



assembly instructions (cont.)

To attach hood

- 1 Attach the hood clips to each side of the stroller frame by pushing the clips until they snap into place.
- 2 Attach the middle section of the hood by aligning the hood clasp to the protruding pin and connect.
3. Tie down the hood with Velcro on either side and around the top of the centre tube.



stroller operation

To use the hood

- 1 To **open** the hood, pull forward and push down the side hood hinges.
- 2 To **close** the hood, lift up the side hood hinges and pull back.

Caution: The hood must be fully closed before folding the stroller.



stroller operation (cont)

To adjust backrest

This stroller has an adjustable backrest. The upright position on the backrest is not suitable for use with children less than six months old.

For use with a newborn (2-6mths), the seat should fully reclined (that is 130° to horizontal). The backrest should only be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

- 1 Squeeze both the right and left hand latches fully and pull them back towards the rear of the stroller to the desired layback position. Lift the backrest to select a more upright seating position.

Caution: Do not adjust the backrest while child is in the stroller.

To adjust the seat extension

- 1 Lower the seat extension by pressing up the release latches located underneath on both sides of the seat extension. Then push the leg support down. Raise the seat extension by lifting it until the release latches lock into place.

Tether strap

 
- 1 Ensure tether strap is used at all times. Make sure your hand is fed through the loop as per the diagram.



stroller operation (cont.)

To use the swivel wheels

- 1 To lock swivels, lift the locking clip up.
The swivel wheels can only be locked when the wheels are in the trailing position (wheels under frame).
- 2 Push the locking clip down to allow the wheels to swivel.

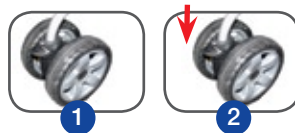

To use the brakes

- 1 To lock the brakes, push down on each brake lever with foot.
To release the brakes, lift each brake lever up with foot.

 
Warning: Always apply both brakes when parking the stroller.



Harness

To secure the child in the harness, push buckle (a) and (b) into the buckle housing (c) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (d) until the desired fit is achieved in the lap, shoulder and crotch strap. To release the buckle, squeeze the top and bottom prongs until it disengages.

Caution: Always adjust the harness when changing the seating position of the child.

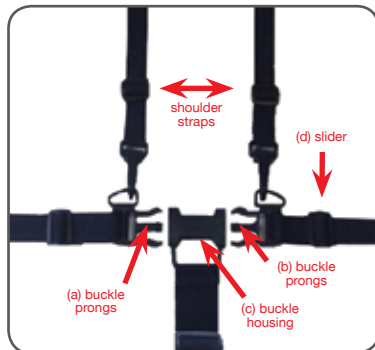


stroller operation (cont.)

To fold the stroller

Close the canopy and return backrest in the fully upright position. Apply the brake and lock the swivel wheels.

 - 1 Lift the lower locking bar
- 2 Depress and release the secondary lock
- 3 Push handles forward until the frame is fully folded - engage storage lock.

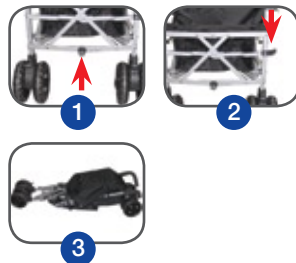

how to care for your stroller

Cleaning

To ensure the long-lasting use of your stroller, dry it with a soft absorbent cloth after use in rainy weather. Use a damp cloth to clean the frame. Do not use abrasive cleaners. After using your stroller on the beach, clean the frame and wheels thoroughly with water to remove the sand and salt. Allow it to dry thoroughly. Removable and non removable fabric covers and trims may be cleaned using a damp cloth with soap or mild detergent. Allow it dry completely before folding or storing it away. Do not dry clean, or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Maintenance

Check stroller regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your stroller, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by CNP Brands. If the wheels squeak, use silicone based spray or light oil ensuring it penetrates the wheel and axle assembly. To prevent mould or mildew, do not fold or store the product if it is damp or wet. Allow it to dry thoroughly. Always store the product in a well ventilated area and away from direct sunlight.

warranty terms and conditions

Subject to the following, C.O. White Pty Ltd ACN 004 169 233 of 20 Calarco Drive, Derrimut, Victoria, 3030, trading as CNP Brands ('CNP Brands') warrants that:

- 1 This product complies with all safety requirements, and where applicable, those specified in the Australian and New Zealand Safety Standards as at the date of purchase; and
- 2 This product is free from defects in workmanship and material under normal use for 12 months from the date of purchase, as recorded on the invoice ('warranty period'). However, where the product has been purchased or is used for commercial purposes, the warranty period is three months from the date of purchase, as recorded on the invoice. In the event of a defect during the warranty period, you are requested to contact your retailer or place of purchase.

Subject to the following, the warranties do not apply in the following circumstances:

- 1 Where the product is not supplied to CNP Brands or an authorised repair agent with the original sales receipt.
- 2 The defect is the result of use of the product not in accordance with the instructions given in any manual or instructions supplied with this product (including, but not limited to, where the maximum weight allowance specified for the product has been exceeded), or maintenance that is contrary to the instructions given in any manual or instructions supplied with this product.
- 3 Damage caused directly or indirectly by repairs that have been carried out by you and any third party (excluding authorised repair agents).
- 4 Where the defect is discolouration, damage to the fabric or watermarks due to washing that has not been in accordance with the instructions given in any manual or instructions supplied with this product, exposure to rainwater, or exposure to sunlight.
- 5 The defect is as a result of accidental damage.
- 6 The defect is as a result of damage caused to the product by negligent transportation of the product other than by CNP Brands.
- 7 Where the product has been damaged through the use of accessories that have not been approved for use by CNP Brands in relation to the product.

The warranties are non-transferable and may only be invoked by the first owner. Any undertakings implied by the Goods Act 1958 (Vic) in respect of the product are expressly negated. None of the above is intended nor should be interpreted as restricting, modifying, excluding, or having the effect of restricting, modifying or excluding the rights of the consumer under the Trade Practices Act 1974 (Cth), in relation to the supply of the product to the consumer, including merchantable quality of the product, fitness for purpose, supply by description and/or supply by sample (subject to the limitations on such rights as set out in that Act). The above is to be interpreted in accordance with the law of the State of Victoria and the Courts of the State of Victoria have exclusive jurisdiction over any dispute arising out of the effect or interpretation of the above.