

Model *Twin Shopper Deluxe*

Features:

- Compact and easy to fold twin stroller suitable from newborn.
- Independent multiposition lieback seats with dual adjustable footrests and removable bumper.
- Dual lockable front swivel wheels for better manoeuvrability.
- Full five-point safety harness in each seat.
- Generous sized shopping baskets and European-style hoods.
- Comes with a bootcover, raincover and fits through a standard doorway.
- Tested and complies with the AS/NZS 2088:2000 Australian Safety Standard.

Additional products and accessories are available from leading department stores and nursery speciality shops include:-

Cots, Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers, Wooden Cots and Manchester.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damages arising from neglect, accidental damage to, or misuse of the product.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products the illustrations used in this instruction manual are generic.

This product is not intended for commercial use.



Childcare Nursery Products Pty Ltd
20-22 Lindaway Place Tullamarine Vic 3043
Phone: 03 9335 2244 Fax: 03 9335 2270
email: sales@childcare-prod.com.au
www.childcare-prod.com.au

Twin Shopper Deluxe 019606

**INSERT LINE
DRAWING HERE**



Keep this booklet in a safe place for future reference
Note: Colour and features of product may differ from the diagram shown
www.childcare-prod.com.au

WARNINGS

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHEN EVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER OTHERWISE THEY MAY BE INJURED.

Some do's and don'ts

- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 3kgs in each basket, or 1kg in each canopy pocket (if supplied).
- The weight of the child using the product should not exceed 15kgs per child per seat.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- Promptly replace worn out or broken parts.
- Always use the safety locks.
- Remove child from stroller before going up or down stairs and escalators.
- Do not lift stroller by the bumper bar.
- To prevent the risk of the stroller catching fire, do not park it near an open fire or a barbecue.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.
- Lubricate wheels and moving parts regularly using a silicon based spray.

WARNING

THIS STROLLER IS NOT DESIGNED FOR USE WITH A TODDLER BOARD.
ATTACHING A TODDLER BOARD TO THIS STROLLER COULD MAKE IT UNSTABLE AND MAY RESULT IN A CHILD BEING SERIOUSLY INJURED.

www.childcare-prod.com.au

How to Care for your Childcare Stroller

Care and Maintenance

To prolong the life of your nursery product keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

Helpful Hints

If the wheels squeak –use silicon based spray ensuring it penetrates the wheel and axle assembly.

When using the stroller near the beach – completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies. Dry thoroughly and lubricate with silicon based spray.

Do Not Dry Clean or Bleach Your Fabrics.

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

www.childcare-prod.com.au

Bootcover

- Place bootcover over the front section of the seat and secure press-studs on hood.
- Secure the straps onto lower front legs of the frame.

Warning: Remove bootcover before folding stroller.



Raincover

- Place raincover over stroller and secure velcro straps and press-studs.
- Remove the raincover when not required especially indoors or in warm weather.



Folding the Stroller

- Before folding the stroller, remove bootcover and close the hood.
- Release both safety locks simultaneously by pulling upwards as indicated.
- Allow the handle to drop to the floor and engage the folding lock.



Assembly Instructions

To Open the Stroller

- Release folding lock as indicated.
- Lift handle until the frame clicks and locks on both sides.
- Ensure the stroller is locked in on both sides before using.



Assemble Front Wheels

- Place each swivel wheel assembly onto front leg until it clicks into position. Ensure swivel housing is to the top as shown. Repeat for other wheel.



Bumper Fit and Detach


- To fit bumper, line up ends of bumper and slide on until it clicks into place.
- Attach press studs to secure the bumper crotch straps around bumper on both seats.
- To remove bumper crotch straps undo press-studs then simultaneously press bumper release buttons on either side of bumper and pull away.



Operating Instructions

Restraints

To secure the child in the harness, push buckle A and B into the buckle housing C until the buckle prongs snap into position. Carefully adjust the waist harness by pulling the slider D until the desired length is achieved. Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs until the buckle disengages. Always adjust the harness when changing seating positions.

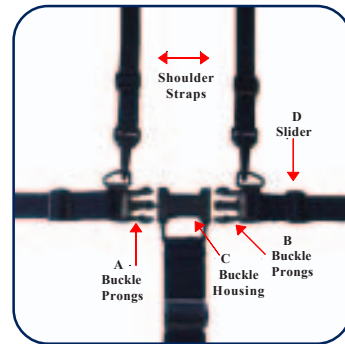

Warning: Many unrestrained children suffer injuries falling from strollers. Use the safety harness at all times.

Multiple Position Lieback Seat

- To lower the backrest, lift backrest adjusting lever by using thumb and forefinger.
- Lower to desired position.
- To raise, simply push backrest up.



Brakes

- Apply brake lever by pushing down with foot. Ensure brake is applied when parking stroller.
- Release by lifting lever with foot.



Seat Extension

- To lower, simultaneously lift the levers on either side and the seat extension will drop automatically.
- To raise, lift the seat extension to the desired position. Locks will automatically engage.



Swivel Wheels

- Push latches down on the front wheels to swivel.
- Pull latches up to lock the wheels in the straight forward position.

Note: On very rough surfaces, lock the wheels to keep them straight. When manoeuvring, unlock to allow the wheels to swivel.



Opening and Closing the Hood

- To open, spread the hood until it is fully expanded.
- Always ensure the hood is closed before folding stroller.

