


Jeep® Overland Limited Jogging Stroller Instructions

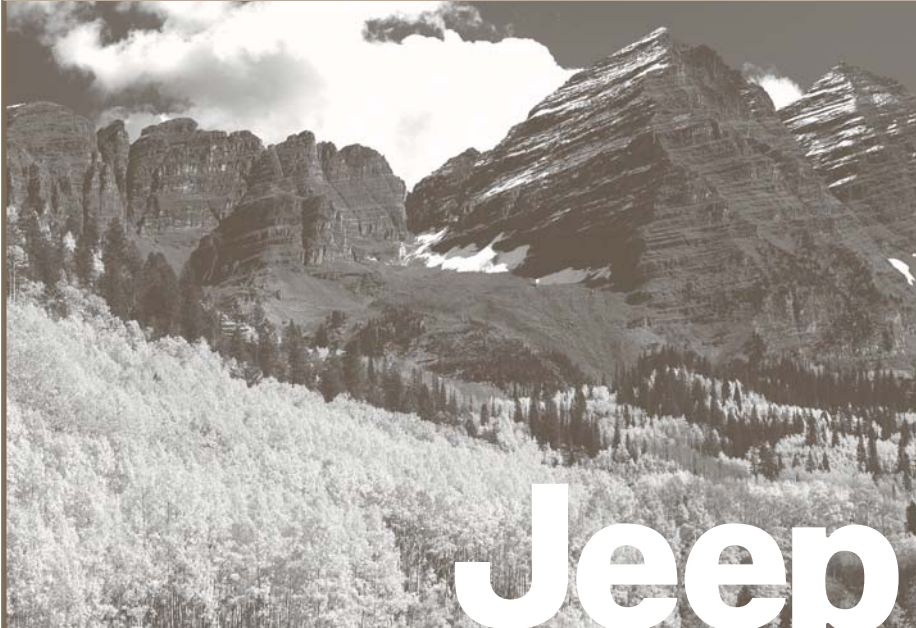

Jeep®

by **Kolcraft**™

 **WARNING**

Your child's safety depends on you. Proper stroller usage cannot be assured unless you follow these instructions.

DO NOT USE STROLLER UNTIL YOU READ AND FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

IMPORTANT SAFETY INFORMATION:

How to Keep Your Child Safe While Using this Stroller

- **NEVER LEAVE YOUR CHILD UNATTENDED WHILE IN STROLLER.** Accidents can happen quickly while your back is turned. You must always keep your child in view while your child is in the stroller, even when sleeping. Do not use this product as a bed. Your child may become tangled in straps or pads and suffocate.
- **Always use restraint system to keep child from standing up or falling out of the stroller. Use this harness at all times.** Do not use product without full 5 point Harness Restraint. Removing the shoulder straps will not adequately restrain child.
- **This stroller is for use with children who can sit up unassisted and who weigh less than 45 lbs. (20.4 kg) and whose head rests below the top of the seat back.** Use by larger children may damage the stroller, or cause a hazardous unstable condition to exist.
- **Not recommended for a child under 6 months old.**
- **DO NOT** use any infant car seat with this stroller. Serious injury may occur.
- **Always lock the stroller open before allowing your child in or near the stroller.** This prevents injuries caused by stroller collapsing.
- **Always set the wheel brakes when stroller is not moving, especially on an incline.** This prevents the stroller from rolling away.
- Always use tether strap while jogging with this stroller.
- Do not use your stroller until you have thoroughly tested and calibrated your hand brake. Adjustments must be made periodically due to cable stretch and wear on the rubberbrake shoes. See "To Adjust Hand Brake" for details.
- To avoid serious injury from the wheel falling off, make sure to properly install and adjust the quick release hub located on the front wheel.

Continued on next page 



What to Avoid While Using this Stroller

• **SUFFOCATION HAZARD:**

- Never leave child unattended while using weather shield. Only use with this product. When using weather shield, canopy must be open. **DO NOT** leave child in sun under weather shield, as child may overheat. **ALWAYS** store weather shield out of child's reach in the provided bag. **DO NOT** allow children to play with weather shield, **IT IS NOT A TOY.**
- **Always balance the weight of the stroller evenly.** To prevent the stroller from becoming unstable or tipping:
 - Do not place parcels or accessory items on the stroller canopy, seat, or over the handle.
 - This stroller is designed for one child only.
 - Do not put more than 10 lbs. (4.54 kg) in the basket.
 - Do not allow children to play with or hang onto the stroller.
- **Never use this stroller on stairways or escalators.**
- **Do not allow child to stand on seat or sit on footrest.**
- **Put on all brakes whenever you park the stroller, especially on an incline.** This prevents the stroller from rolling away.
- **DO NOT lift by tray.**
- **DO NOT put child in basket.**
- **DO NOT** allow children to climb into stroller unassisted. Stroller may tip over and injure child.
- Keep wheels at a recommended tire pressure of 35 p.s.i. (241 kPa) or as specified on the tire wall.
- Only use replacement parts supplied by the manufacturer. If you have a flat tire, you may use a standard bicycle tire repair kit or take it to a bicycle shop to be repaired.
- **Do not carry extra children or use accessories other than those approved by the vehicle manufacturer.**
- **The stroller should not be used near an open fire or exposed flame.**
- **Make sure children are clear of any moving parts if you adjust the stroller, otherwise they may be injured.**

Parts List



Stroller Frame



Front Wheel (1)



Front Tray



Music On The Move®



Weather Shield



Rear Wheels (2)



Odometer



Footrest




Washers (4)



Screws (4)

How to Assemble Your Stroller

To Open Stroller

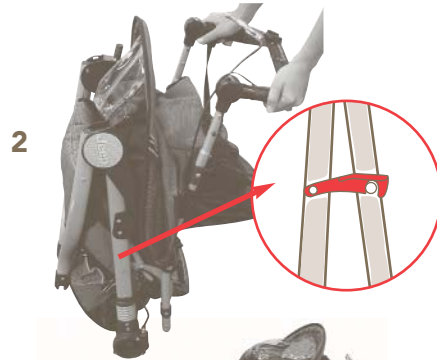

1 Remove any cardboard inserts or plastic ties used to protect the product during shipment.



2 Release the locking latch.




3 Unfold, making sure both side locks snap into place.



To Assemble Rear Wheels

2

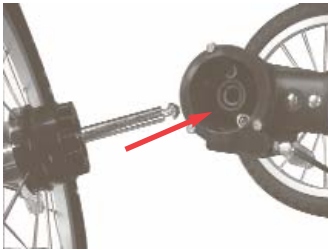


1 Lay stroller on its side.

2 Slide wheel pins into axle hole as shown.

3 Push down on wheel until you hear a click. Pull up on wheel to make sure it is properly secured.

4 Repeat for second side.

5

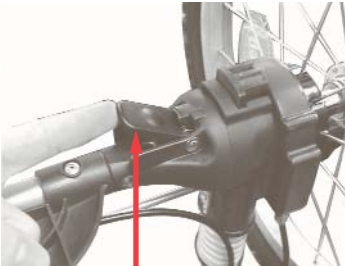

Tab


5 **TO REMOVE WHEEL:** Lift up on tab underneath rear axle as shown and slide the wheel off.

NOTE: Keep wheels at a recommended tire pressure of 35 p.s.i. (241 kPa) or as specified on the tire wall.

To Assemble Front Wheel

1 Place the stroller back on its handle bar.

2

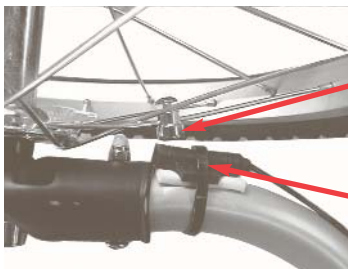



Magnet


Sensor

2 Locate the front wheel, and find the magnet located on one of the spokes. Align the wheel so that the magnet on the spoke is positioned on the same side as the sensor, located on the frame.


Continued on next page →

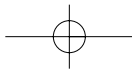



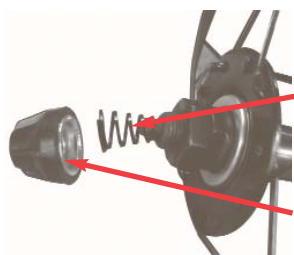



3 Loosen the round nut on the wheel enough for the wheel to slide onto the frame. If the round nut comes all the way off, be sure to reassemble it with the spring as shown.



4 Position wheel lever, 90° angle from wheel as shown, and slide wheel axle onto frame. Tighten round nut clockwise, as tight as possible.



5 Push lever toward frame as shown. Lever must be very tight. If it isn't tight, open lever to 90° angle from wheel and retighten the round nut. Push lever toward frame until it is tight.


TEST: Shake wheel back and forth to be sure it is tight on the frame.

TO REMOVE WHEEL: Open lever to the 90° angle position. Rotate round nut on opposite side counter clockwise until the wheel can slide off of the frame.

To Adjust Handle




1 Press buttons on handle frame in with your thumbs and rotate handle up or down until you find your desired height.

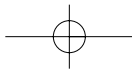

To Adjust Odometer Magnet

TO ADJUST ODOMETER MAGNET

In order for the odometer to function properly, the magnet on the front wheel must be in the correct position. The magnet may have shifted during shipping.

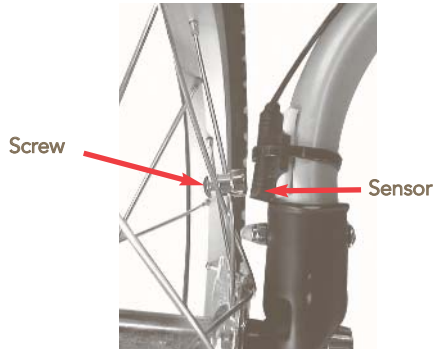

1 Using a screwdriver, loosen the screw on the back of the magnet.

2 Slide the magnet along the spoke so that it is as close as possible to the two lines on the bottom of the sensor.

3 Rotate the magnet so that it faces the sensor.

To Attach Footrest

1



1 Position stroller upside down.

2



2 Align the posts on the footrest through the 4 holes on the frame over the front wheel.

3




3 Using the screws and washers provided, fasten the footrest to the stroller frame, until washers are tight.

4 Stand stroller upright.

To Attach Front Tray

1

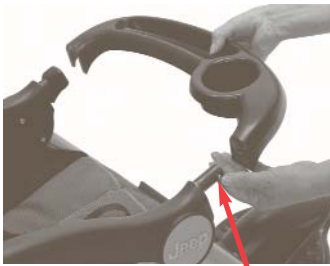

Buttons

1 Slide tray onto round post while pushing in spring loaded buttons, and a click is heard. Make sure there is no gap between stroller frame and front tray.

2



2 Push down on the right side of the tray until the plastic button on the stroller frame pops out through the hole on the front tray.


TO OPEN TRAY: Press the plastic button on the right side of the tray and rotate the tray upwards.

To Attach Music On The Move® Parent Tray

! WARNING

- Loud volume can damage your child's hearing. When turning on music, gradually adjust the volume to a comfortable listening level so child is not startled.
- Do not place more than 3 lbs. (1.36 kg) in this tray to avoid tipping!
- Do not place hot liquids in this tray. Hot liquids can burn your child.

1

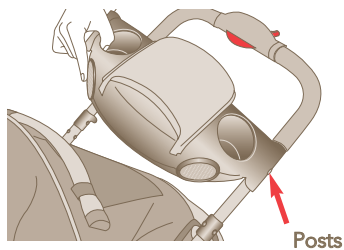

Posts


1 To assemble Music On The Move®, align tray holes with posts on handle and snap on.

2 To remove Music On The Move®, pull each side up and out.

To Install Batteries into Music On The Move®


Requires 4 "AA" Batteries (Not Included).

1

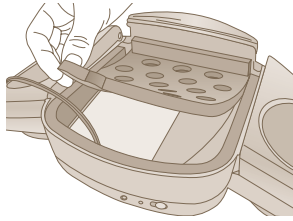

1 Lift up the foam padding in the bottom of the unit.


2

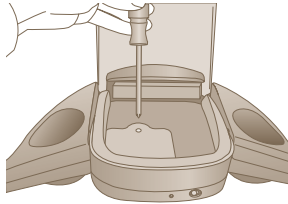

2 Use a Phillips screwdriver to remove the battery door.

NOTE: Foam is used to reduce skipping & eliminate sliding of your portable unit. If your player does not fit inside, remove foam.

3

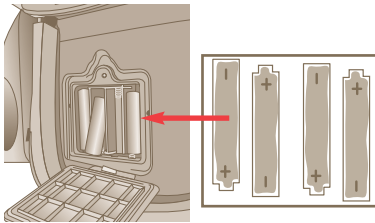

3 Place batteries in the battery compartment as shown.

4 Screw the battery door back onto the unit and replace the foam.

To Attach Odometer

1



1 Slide odometer onto clip located on handle, as shown.


2



Tab


2 **TO REMOVE ODOMETER:** Push down on small tab under odometer, and slide off.

To Adjust Hand Brake

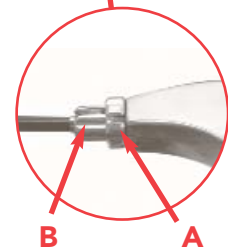

TO TIGHTEN HAND BRAKE TENSION:

- 1** Loosen nut A by turning it away from you, while holding nut B in place.
- 2** Rotate nut B, away from you while holding nut A in place.
- 3** Check the tension in the hand brake at this point, by squeezing it tight. Make sure the hand brake lever has very little movement. You should not be able to push the stroller.
- 4** If the tension is correct, retighten nut A tightly, by turning it towards you, while holding nut B in place.

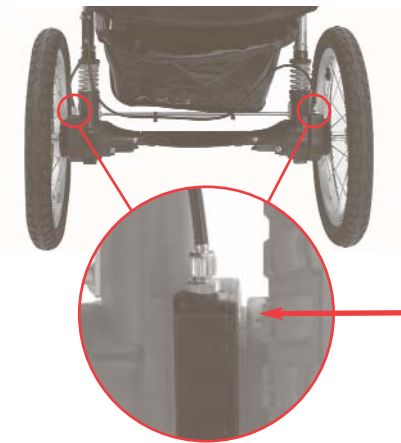

FIRST TIME USE NOTE: Be sure to activate the hand brake 25 times to stretch the cable. Readjust if necessary. Adjustments must be made periodically due to cable stretch and wear on the rubber brake shoes. Do not use your stroller until you have thoroughly tested your brakes.

NOTE: If the hand brake still does not function properly, adjust the nuts in the same manor, by the rear wheels. Be sure to adjust both left and right sides evenly.

To Attach Basket

WARNING

- **Always balance the weight of the stroller evenly.** To prevent the stroller from becoming unstable or tipping:
 - Do not put more than 10 lbs. (4.54 kg) in the basket.
 - Do not put more than 3 lbs. (1.36 kg) in any of this product's pockets.

1



- 1** On the front side of the basket, locate the webbing with snaps on it. On the underside of the footrest, feed the webbing through the loop and snap together. Repeat for the other side of the basket.



- 2** Snap rear of basket around the back tube as shown.

2



How to Properly Use Your New Stroller


To Secure Child In Stroller

WARNING


Avoid serious injury from falling or sliding out. Always use restraint system. Do not use product without full 5 point Harness Restraint. Removing the shoulder straps will not adequately restrain child.

1 Lock foot brake to keep stroller from rolling.


2 Place child in stroller.

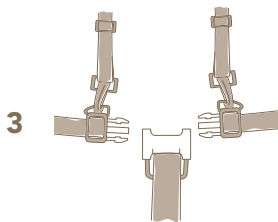

3 Hook shoulder straps to waist belt.

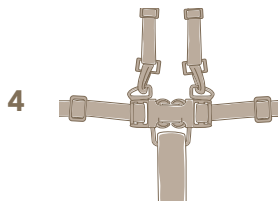

4 To fasten restraint system buckles - push together. Be sure both buckles are fastened to secure child safely.

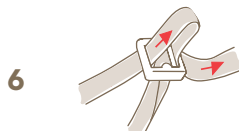

Adjust Restraint System Harness

5 To unsnap restraint system buckles - press tabs to release.

6 For proper fit, adjust shoulder straps and waist band as shown.

TO ADJUST SHOULDER STRAP HEIGHT

1



NOTE: For a secure fit, straps should be at or below the child's shoulder. Adjust straps to higher positions as your child grows.

1

Push buckle through slot as shown. Repeat for second side

2



2

From the back side of the stroller, fasten buckles together to secure restraint.

To Attach Weather Shield

2



! WARNING
SUFFOCATION HAZARD: Never leave child unattended while using this weather shield. Only use with this product. When using weather shield, canopy must be open. **DO NOT** leave child in sun under weather shield, as child may overheat. **ALWAYS** store weather shield out of child's reach in the provided bag. **DO NOT** allow children to play with weather shield, **IT IS NOT A TOY.**

3



1

Open canopy.

2

Insert long narrow piece of *Weather Shield* between the parent tray and the stroller handle.



3

Pull *Weather Shield* all the way through opening between parent tray and canopy and fasten Velcro straps.

4

4

Anchor front of *Weather Shield* under footrest as shown.

To Recline Seat

! WARNING

To avoid finger entrapment or pinching, do not adjust the seat back while child is in the stroller. To avoid head entrapment, always fasten the canopy to the seat back when using the stroller in the reclined position.



1 To recline seat back, loosen belt.

2 To raise seat back, tighten belt.

To Operate Foot Brake



1 **TO LOCK BRAKE:** Push 1-Touch brake bar down to lock wheels.

Unlock



Lock

2 **TO UNLOCK BRAKE:** Lift up on brake bar.

To Operate Hand Brake

1



1 Squeeze hand brake toward handle to temporarily activate the rear brakes on your stroller.

CAUTION: Rear brakes will disengage when hand brake is released.



To Properly Use the Tether

1



- 1 Always attach tether around your wrist when using jogging stroller, so that the stroller will not roll away from you.

Airpump use and storage

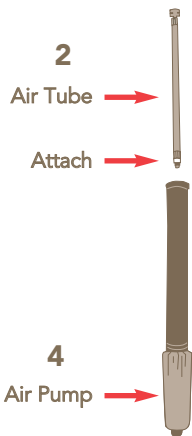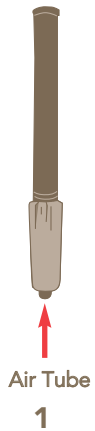


Keep air pump stored in basket when not in use.

- 1 Remove air tube from pump.

- 2 Screw air tube to opposite end of pump.


- 3 Attach air pump to fill tube on tire.

- 4 Pump air pump until tires are filled to 35 PSI (241 kPa) or as specified on the tire wall.

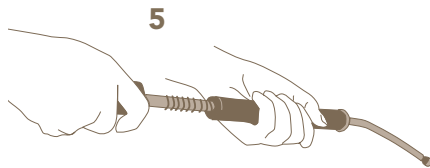


- 5 Disassemble pump and store in basket when not in use.

To Operate Music On The Move®

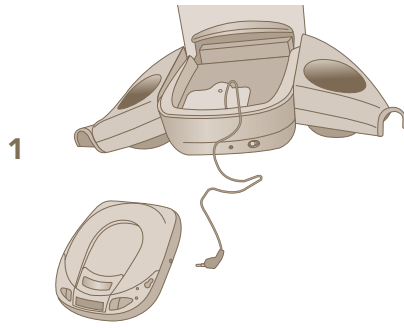

- 1** Connect the *Music On The Move* plug to the headphone jack of your personal sound system (iPod®, radio, cassette, CD, MP3 or mini disk player).

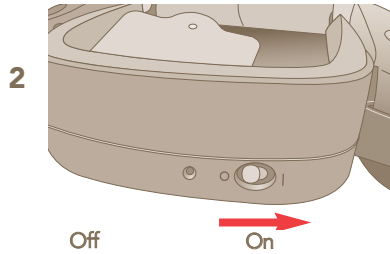

- 2** Turn on *Music On The Move* by locating the power switch as shown. A red light will indicate that the power is on. Be sure to turn off unit after use so not to drain the batteries.

- 3** To avoid startling your child, adjust volume on your personal sound system to its lowest level. Turn on your personal sound system and slowly increase volume to a comfortable listening level for you and your child.

NOTE: If sound cuts out or becomes distorted, check your personal sound system battery level. If battery level is okay and sound is still distorted, replace *Music On The Move's* batteries.

DO NOT leave *Music On The Move* in a hot car or outside in the rain.

To Set Up Odometer



TO TURN ODOMETER ON: Press *SET/RESET* button once.

TO TURN ODOMETER OFF: The odometer will automatically shut off after 2 minutes of inactivity.

INITIAL SET UP - The following steps allow you to change the wheel diameter setting on your odometer, to 16 inches. This must be done in order for the odometer to work properly with this jogging stroller. There is also an option to set the odometer to kilometers (Km) or miles (ML). This is a one time set up, but they can be changed in the future if desired, using these steps.

- 1** Turn odometer on.
- 2** Push *MODE* button until either a "T" or "D" is displayed in the *Mode Symbol* area.
- 3** Press and hold *SET/RESET* button until a set up screen appears. A number between 5" and 30" may be present. Hold the *SET/RESET* button down, until 16" appears, then STOP. Once the 16" is flashing, immediately hit the *MODE* button so that ML or Km are flashing. Once it is flashing, hit the *SET/RESET* button to select your desired setting. After you have made your selections, wait a few seconds and the odometer will return to the original screen.

To Operate Odometer

TO DISPLAY ELAPSED TIME:

- 1 Press *MODE* button until a "T" is displayed in the *Mode Symbol* area. Pressing the *SET/RESET* button will reset the time to zero.
- 2 Elapsed time will be displayed in the lower portion of the screen. Time will not advance while the stroller is stopped.

TO DISPLAY DISTANCE TRAVELED:

- 1 Press *MODE* button until a "D" is displayed in the *Mode Symbol* area. Pressing the *SET/RESET* button will reset the distance to zero.
- 2 The distance traveled will be displayed in tenths of a Km/ML in the lower right portion of the screen. Distance traveled will not advance while the stroller is stopped.

TO DISPLAY BOTH DISTANCE & ELAPSED TIME MODE:

- 1 To view elapsed time and distance while jogging, press *MODE* button until an "ST" is displayed in the *Mode Symbol* area. Odometer will alternate time and distance views, every 5 seconds. Scan mode will not work while stroller is stopped.



WARNING

- **DO NOT** use odometer in the rain or leave in direct sunlight for prolonged periods of time
- Do not disassemble outer case. This could cause device to lose its water resistant properties.
- Do not dispose of battery in fire. Battery could explode resulting in injury or death.

To Replace Battery in Odometer



Battery Cover

NOTE: Requires an LR44 battery.
Replacement battery not included.

- 1** Remove odometer from clip.
- 2** Turn odometer upside down.
- 3** Remove battery cover, by placing a coin in the battery door slot, and turn it counter clockwise.
- 4** Remove old battery, and replace with new LR44 battery. Place battery in, positive side up.
- 5** Replace battery door cover and tighten battery door clockwise.

To Trouble Shoot Odometer

| TROUBLE | CHECK ITEMS | REMEDY |
|---------------------------|--|--|
| No LCD display. | 1. Is the battery dead? 2. Is the battery properly installed? | 1. Replace old battery with a new battery. 2. Make sure that the positive side of the battery is facing up. |
| No current speed reading. | 1. Check for: broken wire, odometer not properly positioned on clip, or sensor and magnet incorrectly aligned. 2. Is the calibration correct? | 1. Clean the contacts on back of odometer. 2. Install the odometer onto clip again. 3. Refer to the procedure of Initial Set Up and set the correct value for tire diameter. |

To Fold Stroller




1 Lock foot brake.

2 Recline seat.

3 Close canopy.

4 Locate trigger fold on frame below parent tray. Pull up latches on frame to fold.

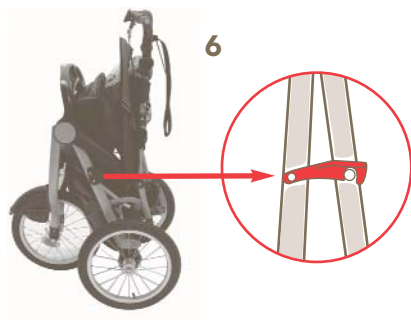

5 Push stroller forward to fold stroller.

6 Engage locking latch.

Care & Maintenance

- Always store your Jeep baby product in a clean dry place. If exposed to damp conditions, leave fully opened and in a warm environment. Clean woven fabric or vinyl parts with mild soap and water solution. Clean metal parts with a damp cloth and wipe dry. Dry wet stroller with a soft cloth to prevent rusting. Storing a damp stroller will encourage mildew to form.
- Do not leave in the boot of a car.
- Avoid exposure to salt water / sea water, as this may encourage the formation of rust. If stroller is used in this environment, completely clean your stroller afterwards to remove sand and salt from mechanisms and wheel assemblies.
- Should parts of your stroller become stiff, squeak or difficult to operate ensure dirt is not the cause. To keep your stroller running smoothly and avoid squeaking wheels use a silicone or graphite based lubricant. It is important to get it into the axle and the wheel assembly. DO NOT over lubricate, as this will encourage the accumulation of dirt.
- When storing stroller, never stack other items on top of it; this may damage the stroller.
- Periodically check for worn parts, loose screws, torn materials or stitching.
- Replace any damaged parts immediately.

*iPod is a registered trademark of Apple Computer, Inc.

Apple Computer, Inc. is not associated with Kolcraft® Enterprises, Inc. or Jeep® and no approval by them is to be implied.

Limited Warranty

Jeep® is a registered trademark of DaimlerChrysler Corporation, and is used under license by Kolcraft®. © DaimlerChrysler Corporation 2006

KOLCRAFT® warrants this product to be free of defects in materials and workmanship, as follows: For a period of ONE YEAR from the date of purchase, KOLCRAFT will repair or replace, at its option, the defective product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. KOLCRAFT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some regions do not allow the exclusion or limitation of warranties set forth above, so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights. We sincerely thank you for your purchase of this KOLCRAFT product.

For further information visit www.kolcraft.com

RECALL WEBSITE:
HELP KEEP YOUR CHILD SAFE. Check
www.recall.gov too see if any products you use
with your child or any of your child's toys have
been recalled.

Personal Record Card

Once in a while, we are less than perfect and one of our products reaches a customer with a problem. In most cases, we can solve your problem with replacement parts. Please contact us before you return one of our products to the store. Once a product is returned, it cannot be resold. The materials and the energy used to make it are wasted.

Please fill in the information in the space provided and attach a copy of your purchase receipt. You will need this information to obtain warranty service.

You can find the Model Number and Date of Manufacture on a sticker located on the rear stroller leg.

Please direct any comments, questions or replacement part requests to:

Born with Style
PO Box 789
Gladesville NSW 1675
Australia

Phone: 1300 885 337 or 02 9816 3837

e-mail: warranty@bornwithstyle.com.au

To contact the manufacturer directly:

Kolcraft Enterprises, Inc. Consumer Service Department
10832 NC Highway 211 East
Aberdeen, NC 28315
1-800-453-7673 in U.S. & Canada, 1-910-944-9345 outside U.S. & Canada
Eastern Standard Time, 8 am - 6:45 pm

Model / Style Number: _____

Date of Manufacture: _____

Date of Purchase: _____

Replacement Parts List

| |
|--|
| |
|--|

Replacement Parts Order Form

Complete the following form. Your model number and date of manufacture must be included on the form to ensure proper replacement parts.

Model Number _____

Date of Manufacture _____

Total:

Shipping & Handling*: _____ \$20

Total Due: _____

Cheque or money order (in AUS dollar) enclosed (payable to Karlisle's Pty Ltd)

Charge to credit card

Visa Mastercard Bank card

Card#: _____

Expiration Date: ____ / ____

Signature: _____

Post to:

Name _____

Address _____

City, State, Post Code _____

()
Telephone _____

Email Address _____