



WARNING



READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF PRODUCT.
 Failure to follow warnings and instructions could result in injury or death to your child.
 Make sure rocker is fully assembled and secure before use.
 Keep these instructions for future reference.

- **STOP** using rocker when your child is 36 months or weighs more than 45 lbs (20.41 kgs).
- To prevent injury from falls:
 - **NEVER** leave your child unattended.
 - **NEVER** use on any elevated surface.
 - **ALWAYS** use restraint until child is able to climb in and out of the chair unassisted.
 - Use the upright position only when child can sit up unassisted.
 - **NEVER** lift rocker while child is seated.
 - **DO NOT** lift by toy bar.
- **NEVER** use rocker as a car seat; it will not protect your baby during an accident.

AVOID STRANGULATION HAZARDS:

- **DO NOT** place items with a string around child's neck (pacifier cords, hood strings, etc.).
- **DO NOT** allow strings to hang into bouncer, including blind cords or suspended toys other than what is provided with this product.
- **DO NOT** use around pets or other children.
- **DO NOT** continue using infant rocker if it becomes bent, broken or if the cloth cover is ripped or torn.

PARTS LIST:



Frame



Toy Bar



Infant Headrest

Seat Pad

How To Assemble Your Rocker


1 TO INSTALL BATTERIES IN VIBRATOR:

Step 1. Insert a flat head screwdriver tip into battery door located underneath vibrator. Release tab, and gently push tab back and up to release.




⚠ CAUTION ⚠
Remove battery before storing the product for a prolonged period of time.

Step 2. Insert "C" cell battery as shown.

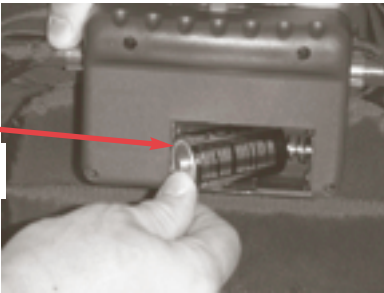


Step 3. Replace battery cover making sure tabs snap securely into place.

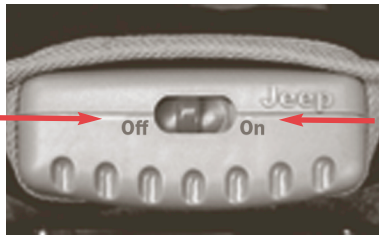

Step 4. Slide button to "on" position to activate vibrating mechanism.

5 → ← 4

Step 5. Slide button to "off" position to stop vibrating motion.

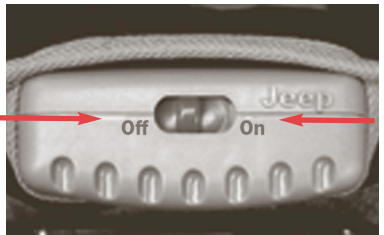

2 TO ASSEMBLE FRAME:

Step 1. To open frame, hold top of frame and pull the wire lever until rocker is open.



Step 2. Slip seat pad onto back of frame making sure release handle fits through opening.




Step 3. Zip the seat pad to secure to frame.

Step 4. Pull fabric over vibrator.



Step 5. Flip rocker over. Feed straps through “D” ring and secure as shown.

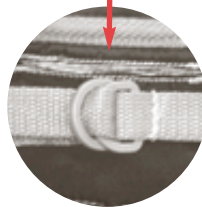

3 TO INSTALL TOY BAR & INFANT HEADREST:

Step 1. Lift red buttons on both sides of toy bar and fasten onto frame as shown.

NOTE: One side of toy bar can be locked open when placing child into rocker. Release one side of toy bar and swing open as shown.



CAUTION: Mirror on toy bar may have a colored piece of plastic film for protection during production. This film likely was removed. For your child's safety, please check the mirror on the toy bar and remove any plastic film you discover prior to use of this rocker.



Step 2. Velcro head rest to seat pad.

NOTE: Use head rest until child can hold their head up unassisted.



How to Properly Use Your New Rocker

1 TO FASTEN RESTRAINT SYSTEM:

Step 1. Place child in the seat. Position restraint system between legs.



Step 2. To fasten restraint system buckle, push buckles together as shown.



Step 3. To adjust restraint system, loosen or tighten loop of restraint to fit snugly around child's waist.

Step 4. To unsnap restraint system buckle – press tabs.



When child is able to climb in and out of the chair unassisted, you may store the restraint system behind the seat.

Insert restraint through small slot in the seat pad.



Secure both fasteners of restraint to backside of rocker as shown.

2 NEWBORN ROCKER USE POSITION:

Adjust rocker into the fully supported recline position.

To adjust seat position, pull up on wire lever and adjust seat back until it is fully reclined and locks into place.



NOTE: Use head rest until child can hold their head up unassisted.



Newborn Position

IMPORTANT! Use the upright Toddler position only when child can sit up unassisted!

3 INFANT ROCKER USE POSITION:

Adjust rocker into the semi-recline position.

To adjust seat, pull up on wire lever and adjust seat back to the middle upright position.



Infant Position

IMPORTANT! Use the upright Toddler position only when child can sit up unassisted!

Stationary Feeding Position


Your rocker also has a stationary bar which locks the chair for feeding time. To use stationary bar, rotate until it is fully extended as shown.



4 TODDLER CHAIR USE POSITION:

Remove toy bar completely and adjust rocker to the up-most position.

To adjust seat, pull up on wire lever and adjust seat back to forward position.

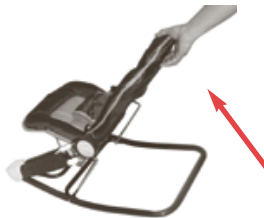

Toddler Position

IMPORTANT! Use the upright Toddler position only when child can sit up unassisted!

5 STORAGE:

Step 1. Remove toy bar.

Step 2. Pull up on wire lever and push seat forward until rocker is flat.



CARE / MAINTENANCE

- To clean: Machine wash seat pad in cold water, gentle cycle. Do not use abrasive cleaners. Line dry. Do not soak in water.
- Always store your Jeep® baby product in a clean dry place. If exposed to damp conditions, leave fully opened and in a warm environment. Dry off with a soft cloth. Storing a damp rocker will encourage mildew to form.
- Do not leave in the boot of a car.
- Avoid exposure to salt water/seat water, as this may encourage the formation of rust. If rocker is used in this environment, completely clean your rocker afterwards to remove sand and salt from mechanisms and wheel assemblies.
- Should parts of your rocker become stiff, squeak or difficult to operate ensure dirt is not the cause.
- Clean metal parts with a damp cloth and wipe dry.
- Clean vinyl parts with mild soap and water solution.
- When storing rocker, never stack other items on top of it; this may damage the rocker.
- Periodically check for worn parts, loose screws, torn materials or stitching.
- Replace any damaged parts immediately.

LIMITED WARRANTY

Jeep® is a registered trademark of DaimlerChrysler Corporation, and is used under license by Kolcraft®. © DaimlerChrysler Corporation 2003
KOLCRAFT® warrants this product to be free of defects in materials and workmanship, as follows: For a period of ONE YEAR from the date of purchase, KOLCRAFT will repair or replace, at its option, the defective product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. KOLCRAFT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some regions do not allow the exclusion or limitation of warranties set forth above, so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights. We sincerely thank you for your purchase of this KOLCRAFT product.

For further information visit www.kolcraft.com

SERVICE HOTLINE

Attention to manufacturing detail and strict quality control ensures that this product meets the highest standards set by Kolcraft Enterprises, Inc. If you encounter any problems or need assistance please call our Customer Service /Warranty Department.

Please direct any comments or questions to:

Born with Style
PO Box 789
Gladesville NSW 1675
Australia
Phone: 1300 885 337 or 02 9816 3837
Email: warranty@bornwithstyle.com.au

Replacement parts provided by local distributor due to accidental damage or misuse to product will be charged accordingly.

To contact the manufacturer directly:

Kolcraft® Enterprises, Inc. Consumer Service Department
10832 NC Highway 211East
Aberdeen, NC 28315
1-800-453-7673 in U.S. & Canada, 1-910-944-9345 outside U.S. & Canada
Eastern Standard Time, 8 am-5 pm

PERSONAL RECORD CARD

Once in a while, we are less than perfect and one of our products reaches a customer with a problem. In most cases, we can solve your problem with replacement parts. Please contact us before you return one of our products to the store. Once a product is returned, it cannot be resold. The materials and the energy used to make it are wasted.

Please fill in the information in the space provided and attach a copy of your purchase receipt. You will need this information to obtain warranty service.

You can find the Model Number and Date of Manufacture on a sticker located on the rocker leg.

MODEL NUMBER: _____

DATE OF MANUFACTURE: _____

DATE OF PURCHASE: _____