

Jeep® Sports Series Highchair Instructions



Jeep




Please take a moment to read through these instructions before you use your Jeep® Highchair.


Important Safety Information:

- Never leave your child unattended while in highchair. Always keep child in view while in the highchair.
- To prevent choking hazard, remove and discard all packing material before using this product.
- Always use restraint system to keep child from standing up or falling out of the highchair. Use the harness at all times.
- Always lock the highchair open before allowing your child in or near the highchair.
- Only use this highchair with children who weigh less than 18 kg.
- Always lock all casters while child is in the highchair.
- Do not allow children to stand on seat or sit on footrest.
- Do not use accessories other than those approved by the manufacturer.
- The highchair should not be used near an open fire or exposed flame.
- Make sure children are clear of any moving parts if you adjust the highchair, otherwise they may be injured.
- Do not use highchair if it is broken in any manner or parts are missing.
- Never recline seat while child is in the highchair.

Parts List

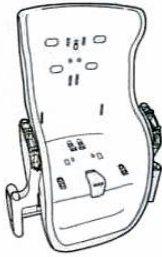

Seat

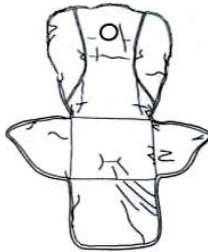

Seat Pad



Harness Straps




Rear Legs



Front Legs



Snack Tray

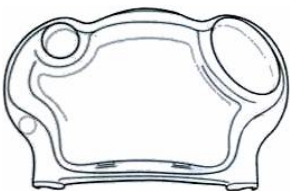

Tray



16mm Screws (x4)




Locking Casters

How to Assemble Your Highchair

To Attach the Seat to the Front Legs

1

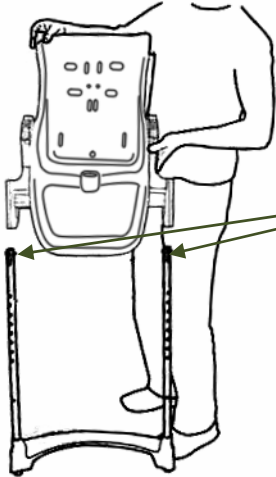

1

Attach the Seat to the Front Legs by putting one Leg in first, then the other as shown.

You will need to squeeze the buttons on the front legs in order to get the seat to lock into place on the front legs.

2




2

Squeeze the height adjustment buttons on both sides of the seat and adjust to lowest position as shown.

To Attach the Seat to the Rear Legs


1

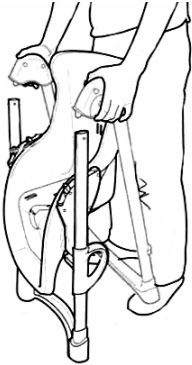

1

Insert the Front Legs into hubs on the Rear Legs as shown.

2

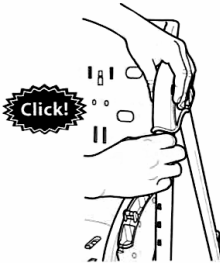


2

Squeeze buttons on both legs in order to slide Front Legs completely into hub to snap into place as shown.

To Attach the Casters


1

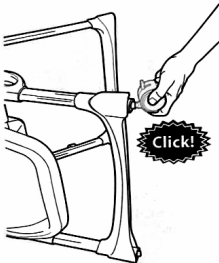

1

Gently lay the unit on its side. Push a Caster into each of the front and back legs until you hear them click into place as shown.

2

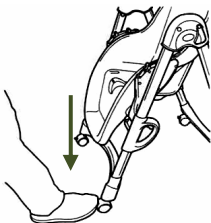


2

To lock Casters, depress tab as shown. Pull tab up to release.


To Assemble the Snack Tray

1

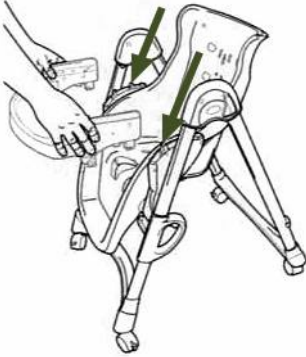


1 Place the Snack Tray down into the slots in the armrest of the seat as shown.

2

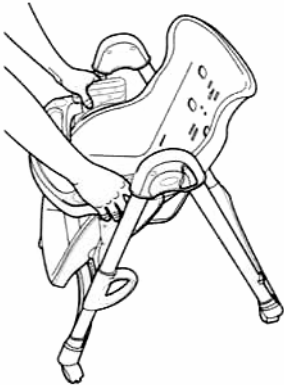

2 Push firmly on Snack Tray to make sure it is securely in place as shown.


3

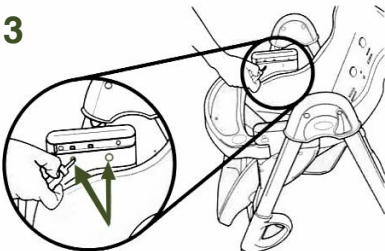

3 Secure Snack Tray with 2 Screws on both sides with a Phillips Screwdriver as shown.

Safety Harness

1

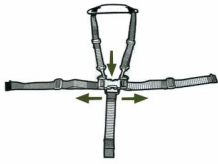

1

Press button on buckle to release shoulder straps as shown.

2



2

Clip shoulder straps into buckle on crotch strap as shown.

3



3

Adjust shoulder, waist and crotch straps to firmly fit around child as shown.

To Attach the Seat Pad and Harness


1



1

Wrap the top of the Seat Pad over the top of the seat back as shown.

2

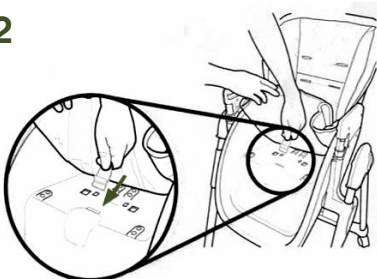


2

Un-buckle the Safety Harness. Thread the crotch strap through the Seat Pad and through the slot on the Seat as shown.

To Attach the Seat Pad and Harness cont...


3

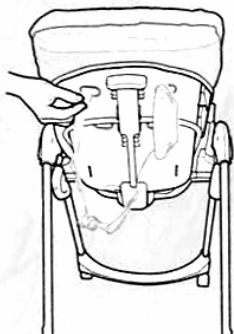

3 Insert shoulder straps through the slots on the back of the Seat and thread through the Seat Pad as shown.

NOTE: Use the top slots on the back of the Seat for a taller child and lower slots for a smaller child.


4

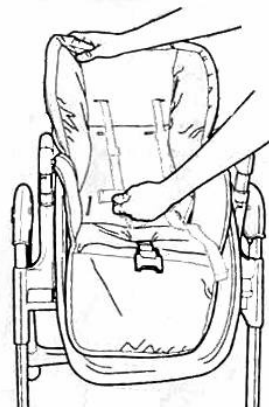

4 Thread the waist strap of the Safety Harness through the slots on the Seat Pad as shown.

NOTE: Make sure to insert waist strap through the slot in the back of the Seat after you thread it through the Seat Pad.

5

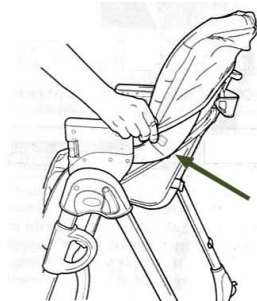

5 Once the top of the Seat Pad is wrapped over the top of the Seat, and the Safety Harness is properly secured. Attach side of Seat Pad to side of the Seat using the "J" hooks as shown.

6


Repeat for second side.

How to Properly Use Your New Highchair

To Adjust the Height



1

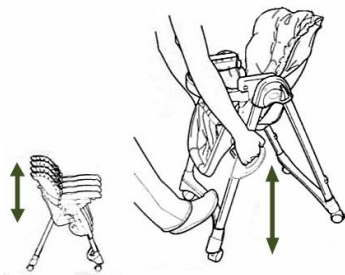


1

Your Highchair can be easily adjusted to 8 different positions. Place one foot on base of Highchair, squeeze the Height Adjusters on each side of the Highchair and raise or lower the chair to desired position until it clicks into position.

NOTE: Pull up on the Seat to make sure it is locked into position.

To Recline the Seat Back

1

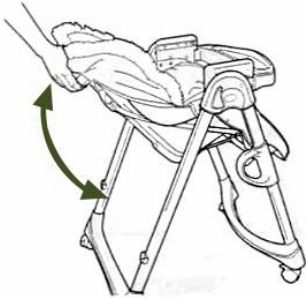

1

IMPORTANT: Never recline seat while child is in the Highchair. Always use Highchair in recline position with children who are not capable of sitting upright unassisted.


Recline Seat back to one of 4 positions by squeezing the Recline Lever on Seat back and raise or lower Seat to desired position.



NOTE: Make sure the Seat back is securely locked into place by lightly pushing down in the seat back before placing child in Seat.

To Attach the Tray

1

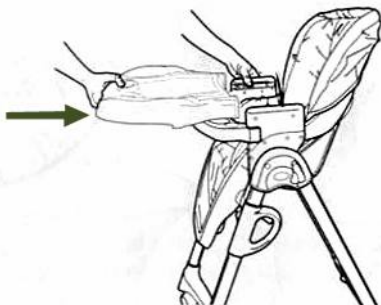

1

Align the slots on the Tray with the bars on the Snack Tray. Squeeze the One Hand Tray Release Lever and push the Tray into one of its 3 positions. Tug on the Tray to make sure it is securely locked into place.

2

To remove, squeeze the One Hand Tray Release Lever and remove the Tray.

NOTE: Wash Tray with mild soap and warm water and dry thoroughly before using. DO NOT wash Tray in Dishwasher.

3




3

The Tray conveniently stores on the back legs of the Highchair as shown. Align the slots under the Tray with the knobs on the back legs and gently push down.

NOTE: This storage feature is designed for the Tray ONLY.


To Remove the Snack Tray

1

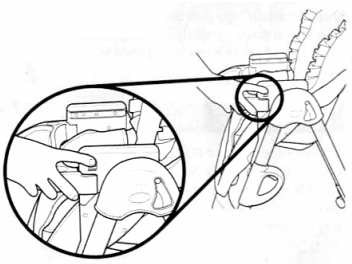

1 Slide release button on Snack Tray down to release as shown.

2

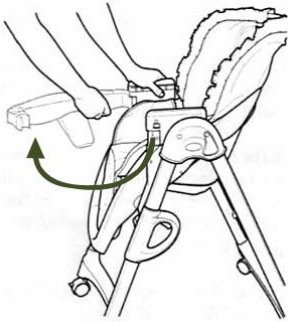

2 Once released, swing open Snack Tray and pull off as shown.

3 Reverse steps to replace.


To Fold/Unfold Highchair

1




1 Adjust the Seat to lowest position. Refer to page 10 “To Adjust the Height”.

2

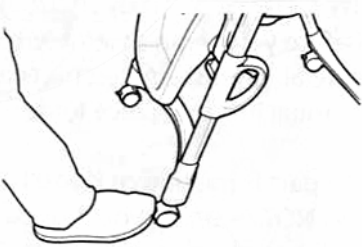

2 Lock all Casters.

3

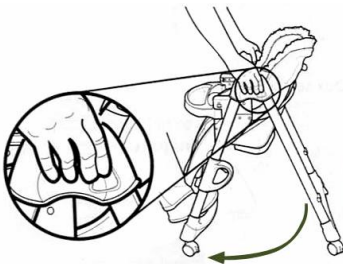

3 Press and hold Fold buttons on each side of the leg hubs, tilt the chair towards you in order for the back legs to swing closed as shown.



Care & Maintenance

There are many ways to look after and protect your Jeep® Highchair. The most important is to clean up any spills or food, before it dries on the fabric.

To clean the Highchair frame, use only household soap and warm water. DO NOT use bleach or detergent.

To clean the Removable Seat Cover, use only household soap and warm water. DO NOT machine wash or dry. DO NOT use bleach or detergent.

Wash and dry Snack Tray and Tray thoroughly before use.

From Time to time check your Highchair for worn parts, torn vinyl or stitching. Contact the Service Centre to replace or repair the parts needed (*see page 16 for Service Centre contact details*).

Warranty

Jeep® is a registered trademark of DaimlerChrysler Corporation, and is used under license by Born With Style. ©DaimlerChrysler Corporation 2006.

Born With Style warrants this product to be free of defects in materials and workmanship as follows: For a period of ONE YEAR from the date of purchase, Born With Style will repair or replace, at its option, the defective product. This warranty is given in addition to (and not in substitute for) applicable statutory rights which you may have.

We sincerely thank you for purchasing this Born With Style product.

For further information visit: www.bornwithstyle.com.au

Contact Details

For all spare parts, repairs or warranty issues, please contact:

Karlisles – Service Centre

Phone: 1300 308 435

Email: info@karlisles.com.au

Web: www.karlisles.com.au

Replacement parts provided by local distributor due to accidental damage or misuse will be charged accordingly.

To contact the manufacturer directly:

Born With Style

PO Box 789

Gladesville NSW 1675, Australia

Phone: 1300 855 337 or 02 9816 3837

Email: info@bornwithstyle.com.au

Personal Record Card

Born With Style recommends that you keep a record of important information about your Jeep® Highchair. Please complete the information in the space provided.

Model Number:

Date of Manufacture:

Date of Purchase: