

phil&teds®

english



.....> twin survival guide

> welcome to the crazy world of parenting.  
take a deep breath...

note:

PG <sup>female</sup>  
~~parental~~ guidance required







NB baby not included



twin.....undressed! <.....



.....> do it!  
-no not that, this ..->

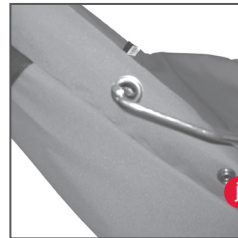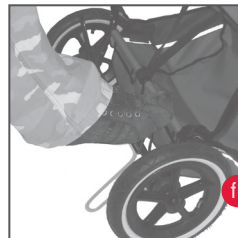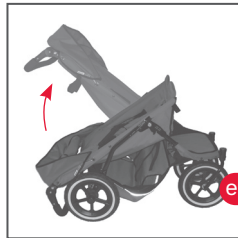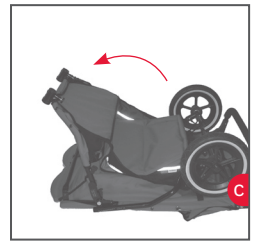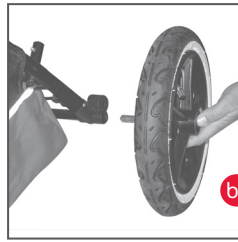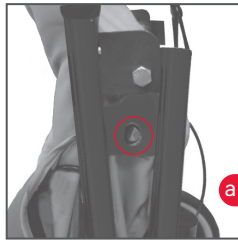



that's it!

## twin instructions

assembling your new phil&teds twin is effortless and fun. just follow these simple steps and in 5 minutes you'll be off!

### bits & bobs

red numbers below refer to buggy parts indicated inside back flap of this guide.

1. rear wheels
2. sun hood
3. front wheels
4. rear wheel axles
5. handle
6. back flaps
7. footwell
8. swivel locks
9. harness
10. fold lock
11. auto frame lock
12. wrist strap

### safe & sound

we've attained the following safety standards:

- EN 1888:2005
- AS/NZS 2088:2000
- ASTM F833-07a

### wheeling & dealing

keep tyres inflated to 22PSI max.

- a release fold lock by pushing in grey button.
- b to attach rear wheels: insert axles into rear wheels (from side without brake disk). depress black axle hub and insert into buggy axle housing.
- c lift footwell as far as hinge will allow.
- d to attach front wheels: fully extend swivel lock and insert wheel rod into buggy frame, as shown. release swivel lock and check wheel is in place for use.  
to lock/unlock swivel wheel: extend and rotate swivel lock, aligning silver pin with hole in underside of swivel lock knob.  
turn wheel towards rear of buggy (parallel with rear wheels). lock will click into place.  
to swivel: extend black swivel lock out and rotate until knob rests on silver pin instead of being inserted into hole.

### gettin' it together

- e turn buggy over onto 4 wheels. pull up handle until you hear a resounding 'click'. ensure that auto frame locks are engaged.

## brakes

- f** stand behind buggy and with one foot push brake down to activate; lift to deactivate.  
**note** always apply brake when parking your buggy. apply brake before loading children.

## handle

- g** stand behind buggy, press in both grey buttons and rotate handle to desired height.

## hood

- h** hood will come attached.  
 to erect: pull hood back and attach both outer sets of snaps to handle hinges, then secure middle snap to cross bar.  
**i** stand in front of buggy and connect remaining 4 snaps to buggy frame.  
**j** to remove hood: undo all snaps and remove crimped wire ends from eyelets on both sides of buggy frame.  
**k** then fold hood in half in a downward motion and remove.

## harness

- l** unclip buckles on breastplate and place baby in buggy. set upper strap height to fit snugly over baby's shoulders. breastplate should fit snugly on baby's chest. (you should be able to fit 2 average sized fingers between straps and baby).

## ups & downs

- there are 3 seat positions: upright, heads up and newborn. adjust as required using seat adjustment clips at rear of main seat.  
**m** upright: both clips are done up and top webbing strap is as shown.  
**n** heads up: both clips are done up and top webbing strap is as shown by the right hand seat position.  
**o** newborn: both clips are undone.  
**p** to return seat to upright position: invert back rest and reattach clips.

## plastic back flap

- q** clear plastic back flap can be attached to back of buggy to help protect your child from poor weather. attach using toggles as shown. back flap can be rolled up and held at top using toggle under hood.  
**warning:** never allow plastic to fall over child.

## folding

- r** rotate both auto frame locks at bottom of frame seat down 180° then press in, allowing frame to collapse.  
**s** lift up cross bar allowing front wheels to fold under frame. press frame flat until fold lock clicks into place.

## add & adapt

other products available for the twin:

### buggy covers

- twin storm covers
- twin sun mesh covers

### buggy beds and liners

- cocoon
- lamb skin liner
- race seat liner
- sponge ted liner
- buggy bunny liner
- snuggle & snooze sleeping bag

### buggy storage

- pannier bags

## cuts & bruises

cleaning and caring for your twin.

### twin fabric

brush off dirt. more intense cleaning can be done by hand, in warm water, using mild natural soap. do not use detergents or bleach. air dry.

### twin frame

brush dirt off frame and wheels regularly. clean with non-abrasive household cleaner and soft cloth. wash off sand and salt after visiting beach. always dry frame if wet.

### twin tyre and inner tube

the valve is car-size. manually inflate to 20 – 22psi max. releasing air gives a softer ride but lower pressure reduces tread life.

new inner tubes and tyres are generally available (2<sup>1</sup>/<sub>4</sub>" x 12<sup>1</sup>/<sub>2</sub>" tyre) from your dealer, cycle or specialist wheel shops. standard tyre kits can repair punctures. a flat tyre can result from grit holding the valve open; to check: inflate tyre, deflate rapidly, and re-inflate. tyres and tubes are not under warranty. do not over inflate. tyre pressure is affected by heat especially when inside parked cars.

### twin rubber covers and grip

take care to avoid damage to foam rubber. foam rubber is not under warranty.

### twin moving parts

excessive wear can reduce effectiveness and safety. parts may need periodic lubrication. inspect essential components for: fraying – especially webbing straps and safety harnesses. wear – locks, snap fasteners, tyres, plastic parts, zips and moving parts. safety –locks must not be loose.

## rights & remedies

\*consumers may have extra rights in some countries or states. our products are warranted against defects in materials and workmanship for one year from date of purchase. if product has a manufacturing fault we will repair it for free. if not practical to repair it, we will, at our discretion, replace part in question. if product fails due to wear and tear, accident, neglect or negligence, or is outside the warranty, we will

happily repair it for a reasonable charge.\*

**who is covered?** original purchaser buying product from an authorised dealer. proof of purchase is required.

**what is covered?** workmanship or materials that are deemed faulty, providing buggy has at all times been used in normal conditions, in accordance with instructions, and been properly maintained.

**what is not covered?** second hand product. modified product. poorly maintained product. normal wear, fading and fabric cuts. improper use (by way of example): abnormal use; not following instructions; child left unattended; safety harness not used; excessive load; transport damage i.e. airline or freight damage.

**customer costs within warranty.** customer is responsible for any inwards freight charge to return product to manufacturer's representative for warranty and or service.

**customer costs outside warranty.** where proof of purchase is not provided or product is outside of one year period. manufacturer's representative reserves right to charge a service fee and/or charge for parts replaced/ repaired. a return freight charge may apply.

**exclusions.** any consequential loss or damage to any person or property directly or indirectly as a result of using product.

**who do I contact?** please discuss any warranty or service queries with your store of

purchase. you will be required to show proof of purchase. they will inform you of next step. products that are returned directly to manufacturer by customer will NOT be eligible for warranty.

## log on & relax

please register your product purchase through our online warranty registration by visiting [www.philandteds.com](http://www.philandteds.com)

## Warnings

keep instructions with your buggy for future reference. injury may result from improper use or not following all safety precautions.

**warning** never leave children unattended in the buggy, it may be dangerous. take extra care with any child asleep in the buggy.

**warning** ensure that all locking devices are engaged before use.

**warning** any load attached to the handle affects the stability of the buggy. do not hang luggage or carry extra children on the buggy.

do not allow a child to stand on the seats. do not carry extra weight over that allowed by the instructions; this may make the buggy unstable. do not place more than 3kg/7lbs in the parcel tray.

**warning** always place wrist strap around your wrist when using buggy.

**warning** always use the safety harness to avoid serious injury from falling or sliding out. always secure all safety harness straps and ensure it's correctly fitted and adjusted to secure the child firmly. make sure children are clear before folding, erecting or adjusting the buggy. if required, use the D-rings on the waist strap to attach a safety harness.

**warning** apply brakes when parking the buggy. apply brakes when loading or unloading children. buggy is intended for two children up to 4 years or maximum weight of 40kg/88lbs and height of 1m or 3.3 feet.

**warning** care should be taken if the buggy is used on stairs or escalators.

**warning** the buggy should not be used near an exposed flame.

**warning** ensure that fingers are kept well clear of the folding mechanism when folding the buggy.

**warning** double kit is not recommended for children under 6 months.

**warning** the buggy is not suitable for running, skating, horse riding, water skiing, acrobatics or similar activities. It is not a flotation device.

**enjoy!**

> send 102 112 daniell st newtown wellington nz

visit [www.philandteds.com](http://www.philandteds.com)

ph +64 4 380 0833

fax +64 4 380 0137

© Phil and Teds Most Excellent Buggy Company Ltd 2007.

We (Phil and Teds Most Excellent Buggy Company Ltd) own the intellectual property rights in our brands, designs and inventions featured in this publication. These include, without limitation, the phil&teds, adapt&survive!, &, INLINE trade marks and INLINE DOUBLE BUGGY shape. We actively pursue people who infringe our intellectual property.