

phil&teds®

english



.....> inline™ dash survival guide

> welcome to the crazy world of parenting.
take a deep breath...

note:

PG *female* ~~parental~~ guidance required

NB baby not included



4 in 1













adapt&survive!™




dash.....undressed! <.....



.....> do it!
-no not that, this ---->

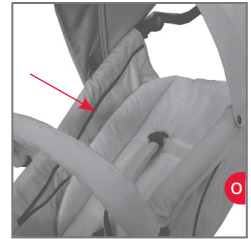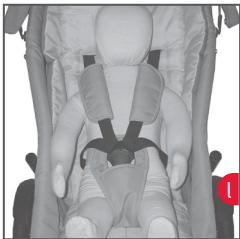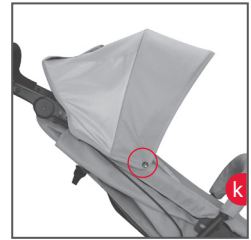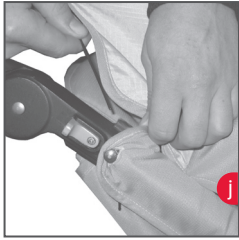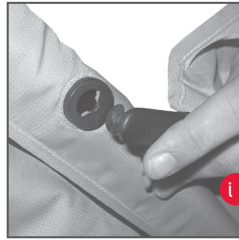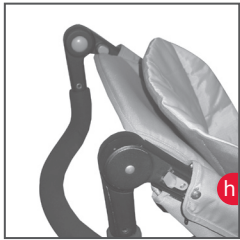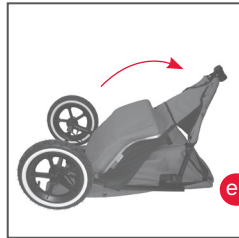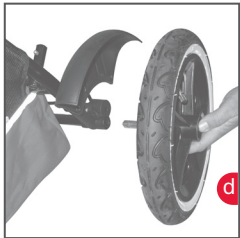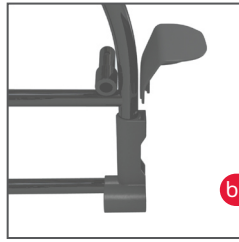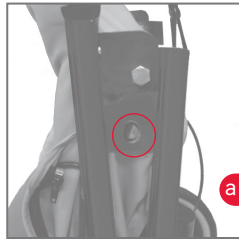

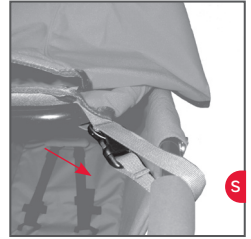

..... > that's it!

dash instructions

assembling your new phil&teds inline™ dash is effortless and tool-free. just follow these simple steps and in 5 minutes you'll be off!

bits & bobs

red numbers below refer to buggy parts indicated inside back flap of this guide.

1. rear guards
2. rear wheels
3. sun hood
4. front wheel
5. rear axles
6. handle/brake
7. back flap
8. footwell
9. swivel lock
10. harness
11. auto frame lock
12. fold lock release trigger
13. wrist strap
14. double kit (sold separately)
15. retaining strap (comes with double kit)

safe & sound

we've attained the following safety standards:

- EN 1888:2005
- AS/NZS 2088:2000
- ASTM F833-07a

wheeling & dealing

keep tyres inflated to 22PSI

- a release fold lock by pushing in grey frame lock button.
- b attach rear guards by clipping them on as shown.
- c insert axles into rear wheels (from side without brake disk).
- d to attach rear wheels: depress silver axle hub and insert wheel axle into buggy axle housing.
- e lift footwell as far as hinge will allow.
- f to attach front wheel: fully extend swivel lock knob and insert wheel rod into buggy frame, as shown. release swivel lock knob and check wheel is in place for use.
to place front wheel in swivel position: rotate swivel lock 90° until it clips into place (visibly extended).
to place front wheel in locked (non swivel) position: rotate swivel lock 90° until it clips into place (no longer extended).

gettin' it together

- g turn buggy over onto 3 wheels. pull handle up until you hear a resounding 'click'.

handle

dash is equipped with an intelligent handle that incorporates multi adjustment and braking.

brakes

h to activate brakes: stand behind buggy, depress both grey handle buttons and rotate handle down to its lowest position. (rotate handle up to one of top two positions to release brakes).

note always apply brakes when parking your buggy. apply brakes before loading children.

sunhood

i to attach sunhood: insert plastic sunhood ends into plastic mounts on both sides of buggy frame.

j rotate sunhood back and slide rear wires into plastic channels at top of buggy frame as shown.

k attach front sunhood snaps to side of buggy fabric.

harness

l to secure harness: unclip buckles on breastplate and place baby in buggy. set upper strap height to fit snugly over baby's shoulders & reclip buckles.

note breastplate should fit snugly on baby's chest, allowing you to fit 2 average sized fingers between straps and baby. harness strap tension can be adjusted using clips located at shoulder height.

ups & downs

m dash seat can be adjusted to any position from upright through to lie-flat.

to adjust seat:

n to recline seat from 'upright' through any position to 'sleepy' (10° up from lie-flat): compress seat adjustment clip on seat back and slide into desired position.

o from 'sleepy' position to 'lie-flat': undo zips on either side of front seat pad. zips can also be used to take seat from 'upright' position to 'heads-up' (10° recline from upright).

plastic back flap

p clear plastic back flap can be attached to back of buggy to help protect your child from poor weather. attach using toggles as shown. back flap can be rolled up and held at handle height using toggle under sunhood.

warning: never allow plastic to fall over child.

baby & toddler buggy

to use baby & toddler position requires purchase of double kit accessory.

q to attach double kit to front of buggy (baby & toddler position): remove pull bar. ensure hinges are attached to double kit (standard).

depress nib springs and insert hinge ends into pull bar holes.

note hinges are marked with L and R denoting left and right when viewed from behind buggy.

- r** feed retaining strap beneath rear of sunhood, loop it around handle and connect clip.

warning never use baby & toddler buggy without using retaining strap.

note do not lift buggy using double kit. damage to double kit hinges may occur.

- s** double kit has a recline feature. to activate: undo both zips that run around rear of seat.

double buggy

- t** to attach double kit to rear of buggy (2 toddlers position): start with buggy seat in upright position. remove hinges from double kit. align double kit tubes with supports on back of buggy frame. depress nib springs on supports and slide double kit on, ensuring nib springs pop through holes on double kit frame. load heavier toddler in front seat first, then place lighter toddler in double kit at rear. always unload rear toddler first.

warning: never use double kit without toddler in front seat.

folding

remove double kit if attached in rear position.

- u** depress and hold in red safety button on inside left of handle, whilst pulling up frame release triggers on both sides, as shown. allow seat back to fall backwards.
- v** lift cross bar allowing front wheel to fold under frame. press frame flat until fold lock clicks into place.

add & adapt

other products available for dash:

buggy covers

- single and double stormy weather covers
- single and double sunny days covers

buggy beds and liners

- cocoon
- lamb skin liner
- race seat liner
- sponge ted liner
- buggy bunny liner
- snuggle & snooze sleeping bag

buggy storage

- blazing saddles pannier bags
- up & away buggy travel bag
- hang bag & belt
- shop & drop

cuts & bruises

cleaning and caring for your dash.

dash fabric

brush off dirt. more intense cleaning can be done by hand, in warm water, using mild natural soap. do not use detergents or bleach. air dry.

dash frame

brush dirt off frame and wheels regularly. clean with non-abrasive household cleaner and soft cloth. wash off sand and salt after visiting beach. always dry frame if wet.

dash tyre and inner tube

the valve is car-size. manually inflate to 20 – 22psi max. releasing air gives a softer ride but lower pressure reduces tread life. new inner tubes and tyres are generally available (2¹/₄" x 12¹/₂" tyre) from your dealer, cycle or specialist wheel shops. standard tyre kits can repair punctures. a flat tyre can result from grit holding the valve open; to check: inflate tyre, deflate rapidly, and re-inflate. tyres and tubes are not under warranty. do not over inflate. tyre pressure is affected by heat especially when inside parked cars.

dash rubber covers and grip

take care to avoid damage to foam rubber. foam rubber is not under warranty.

dash moving parts

excessive wear can reduce effectiveness and safety. parts may need periodic lubrica-

tion. inspect essential components for: fraying – especially webbing straps and safety harnesses. wear – locks, snap fasteners, tyres, plastic parts, zips and moving parts. safety –locks must not be loose.

rights & remedies

*consumers may have extra rights in some countries or states.

our products are warranted against defects in materials and workmanship for one year from date of purchase. if product has a manufacturing fault we will repair it for free. if not practical to repair it, we will, at our discretion, replace part in question. if product fails due to wear and tear, accident, neglect or negligence, or is outside the warranty, we will happily repair it for a reasonable charge.*

who is covered? original purchaser buying product from an authorised dealer. proof of purchase is required.

what is covered? workmanship or materials that are deemed faulty, providing buggy has at all times been used in normal conditions, in accordance with instructions, and been properly maintained.

what is not covered? second hand product. modified product. poorly maintained product. normal wear, fading and fabric cuts. improper use (by way of example); abnormal use: not following instructions; child left unattended; safety harness not used; excessive load; transport damage i.e. airline or freight damage.

customer costs within warranty. customer is responsible for any inwards freight charge to return product to manufacturer representative's for warranty and or service.

customer costs outside warranty. where proof of purchase is not provided or product is outside of one year period. manufacturer representative's reserves right to charge a service fee and/or charge for parts replaced/ repaired. a return freight charge may apply.

exclusions. any consequential loss or damage to any person or property directly or indirectly as a result of using product.

who do I contact? please discuss any warranty or service queries with your store of purchase. you will be required to show proof of purchase. they will inform you of next step. products that are returned directly to manufacturer by customer will NOT be eligible for warranty.

log on & relax

please register your product purchase through our online warranty registration by visiting www.philandteds.com

Warnings

keep instructions with your buggy for future reference. injury may result from improper use or not following all safety precautions.

warning never leave children unattended in the buggy, it may be dangerous. take extra care with any child asleep in the buggy.

warning ensure that all locking devices are engaged before use.

warning any load attached to the handle affects the stability of the buggy. do not hang luggage or carry extra children on the buggy. do not allow a child to stand on the seat. do not carry extra weight over that allowed by the instructions; this may make the buggy unstable. do not place more than 3kg/7lbs in the parcel tray.

warning always use the safety harness to avoid serious injury from falling or sliding out. always secure all safety harness straps and ensure

it's correctly fitted and adjusted to secure the child firmly. make sure children are clear before folding, erecting or adjusting the buggy. if required, use the D-rings on the waist strap to attach a safety harness.

warning apply brakes when parking the buggy. apply brakes when loading or unloading children. a buggy in single or baby & toddler configuration is intended for children up to 4 years or maximum weight of 40kg/88lbs and height of 1m or 3.3 feet. in the double configuration the recommended max load is 25kg/55lbs in front seat and 15kg/33lbs in rear seat.

warning always place wrist strap around your wrist when using buggy.

warning do not place a child in the rear seat of a buggy without a heavier child being in the front seat. do not modify the buggy or use accessories not designed for the buggy. they may be unsafe.

warning care should be taken if the buggy is used on stairs or escalators.

warning the buggy should not be used near an exposed flame.

warning double kit is not recommended for children under 6 months.

warning ensure that fingers are kept well clear of the folding mechanism when folding the buggy.

warning the buggy is not suitable for running, skating, horse riding, water skiing, acrobatics or similar activities. It is not a flotation device.

warning check that the seat unit attachment devices are correctly engaged before use.

enjoy!

> send 102 112 daniell st newtown wellington nz

visit www.philandteds.com

ph +64 4 380 0833

fax +64 4 380 0137

© Phil and Teds Most Excellent Buggy Company Ltd 2007.

We (Phil and Teds Most Excellent Buggy Company Ltd) own the intellectual property rights in our brands, designs and inventions featured in this publication. These include, without limitation, the phil&teds, adapt&survive!, &, INLINE trade marks and INLINE DOUBLE BUGGY shape. We actively pursue people who infringe our intellectual property.