

Spare Parts Diagram 105-691_Spare_Parts
2008 Triple Urban Frame Assembly



ITEM NO.	DESCRIPTION
1	Foam Handle Cover triple
2	Triple Urban Handle Sub Assy
7	Double Urban RH Susp Down Tube Sub Assy
8	Double Urban LH Susp Down Tube Assy
9	Triple Urban Base Tube Sub Assy
10	Triple Urban Hammock Support Tube Assy
11	Triple Urban U Tube Assembly
12	Triple Urban Lower Cross Brace Sub Assy
13	Triple Urban Rear Axle Assy (15.08.06)
14	Single Acting Brake Wire (28.07.06)
15	Swivel Lock Mechanism
16	Swivel Bush - Nut Cap
17	Urban Fork Sub Assy (LH)
18	Urban Fork Sub Assy (RH)
19	Riserplate Pivot Tube
20	Riserplate & axle clamp
21	Triple Urban Riserplate
22	Secondary Lock LH Sub Assy
23	Locking slider RH Sub Assy
24	Anodised Triple footplate sub Assy - 2006
25	12" Tyre and Tube (Slash Tread)
26	Break Cog (6 lug)
27	Q.R. rear wheel Assy - Slash tyre
28	12" Slash tyre & rim Assy
29	Triple sunhood wire
30	Triloc knob assembly with moulded nyloc nut - 22.05.06
31	Front Axle Shaft
32	Brake Wire Cover
33	Urban triple base pivot sub Assy (2004)
35	Urban base spreader (trpl)

