

Model

Universal/Stirling Change Table

Features:

- Classic style and high quality three tier timber change table.
- Sturdy construction with smooth slat sides.
- Two lockable castors with brakes for easy manoeuvrability.
- Adjustable safety strap to hold baby securely.
- Suitable from birth to 12 months or 12 kg, whichever comes first.
- Change table designed to fit a change mat size of 750 x 500 mm- not included.

Additional products and accessories available in leading department stores and nursery speciality shops include:-

Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers and Wooden Cots.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damage arising from neglect, incorrect assembly, accidental damage to, or misuse of the product. Attempts to repair the cot other than by a Childcare Nursery Product's representative are not covered under this warranty. Where a failed component or cot is replaced under warranty, the balance of the original warranty will remain effective. The replaced component or cot does not carry a new warranty. This warranty is only valid to the original purchaser and is not transferable in any way.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products, the illustrations used in this instruction manual are generic.

This product is not intended for commercial use.



Childcare Nursery Products Pty Ltd
 20-22 Lindaway Place Tullamarine Vic 3043
 Phone: 03 9335 2244 Fax: 03 9335 2270
 email: sales@childcare-prod.com.au
 www.childcare-prod.com.au

Universal/Stirling Change Table

092100/092120

Line Drawing to
 be inserted by
 Factory

*Universal Change Table
 (model# 092100)*

Line Drawing to
 be inserted by
 Factory

*Stirling Change Table
 (model# 092120)*



**Keep this booklet in a safe place for future reference
 Note: Colour and features of product may differ from the diagrams shown**

www.childcare-prod.com.au

WARNING

- NEVER LEAVE CHILD UNATTENDED ON CHANGE TABLE.
- USE THE SAFETY STRAP AT ALL TIMES.
- TO PREVENT FALLS, DO NOT USE CHANGE MAT WITH A THICKNESS OF MORE THAN 30 MM.
- WHEN LOCKABLE CASTORS/WHEELS ARE FITTED, THEY SHOULD BE LOCKED WHEN THE CHANGING UNIT IS IN USE.

BEFORE ASSEMBLING THE CHANGE TABLE, PLEASE READ THE INSTRUCTIONS CAREFULLY AND ALWAYS KEEP THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

Recommended change mattress size

This change table has been manufactured for use with a change mat which measures **750 mm long and 500 mm wide and up to 30 mm in thickness.**

Some do's and don'ts

- All assembly fittings should always be tighten properly.
- To prevent falls, do not leave your baby unattended on the change table and use the safety strap provided to secure your baby at all times.
- Both brakes on the castors must be applied before placing your baby on the change table.
- Discontinue use once child turns 12 months or 12 kg, whichever comes first.
- Do not allow older children to climb or play on the change table.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- Promptly replace worn out or broken parts.
- Do not overtighten the bolts.
- Do not use this change table if any part is broken, torn or missing.
- Ensure children are clear of any moving parts when adjusting the change table.
- Retain your warranty card and keep your sales receipt to provide proof of purchase.

How to Care for your Childcare Product

Care and Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

For cleaning, wipe with damp cloth and use a mild soap solution if necessary. Do not use detergent or abrasives on wooden surfaces. Always store product in a clean dry place.

Helpful Hints

If any parts squeak, use a silicon based spray, ensuring it penetrates mechanism sufficiently.

If you have any difficulties in assembling the change table, please contact our Service Department on 9335 2244.


WARNING

- NEVER LEAVE CHILD UNATTENDED ON CHANGE TABLE.
- USE THE SAFETY STRAP AT ALL TIMES.
- TO PREVENT FALLS, DO NOT USE CHANGE MAT WITH A THICKNESS OF MORE THAN 30 MM.
- WHEN LOCKABLE CASTORS/WHEELS ARE FITTED, THEY SHOULD BE LOCKED WHEN THE CHANGING UNIT IS IN USE.

PARTS



Headboard

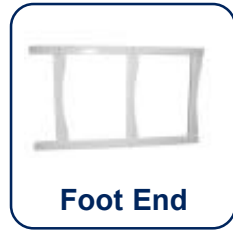

Foot End



Shelves X 2



Top Shelf



Castors X 2



Universal Bolts X 16
Stirling Bolts X 14
Allen Key

Assembly Instructions

As small parts are involved in assembly, children should be kept clear of the assembly area. Dispose of all packaging material immediately after the change table is assembled. Identify all parts and components. Clear an area on the floor for assembly and place a sheet on the floor to ensure the change table will not be scratched during assembly.

- Insert castors into headboard legs. Stand end up and apply body weight to securely attach castors into place. Place the headboard on the sheet, on its side as per the diagram.



- Attach both the middle and end shelves into the headboard as per the diagram by aligning the shelf grooves with the headboard slots.



- Insert eight bolts into the holes on headboard making sure they are secure but not tight.



- Attach both top shelf sides into the headboard as per the diagram by aligning the shelf grooves with the headboard slots. Insert bolts into the holes on headboard making sure they are secure but not tight.




- Place the headboard onto its back and gently slide the top shelf along the grooves of the headboard.



- Attach the foot end to the shelves by aligning the foot end to the shelf grooves.



- Secure the remaining six bolts into the foot end of the Stirling Change Table.
- Secure the remaining eight bolts into the foot end of the Universal Change Table.
- Once all bolts are secure, stand change table up and tighten all bolts.

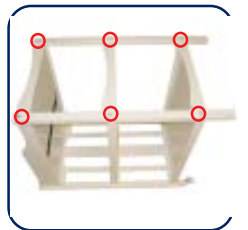

WARNING: DO NOT OVERTIGHTEN BOLTS