

Travel Cot

Features:

- Easy-to-operate travel cot with umbrella folding action.
- Self-tensioning folding base with safety lock.
- Soft padded single action **lift and lock** rails with press-button release mechanism.
- Excellent visibility for parents and baby through three mesh sides.
- Comes with combined folding mattress and base board.
- Toy pocket and carry bag included.

Additional products and accessories available in leading department stores and nursery speciality shops include:-

Portable Cots, Change Tables, Highchairs, Hook on Highchairs, Safety Gates, Bed Guards, Rockers, Parasoles, Pramettes, Strollers, Walkers, Nappy Bags, Rain Covers and Wooden Cots.

Warranty

The manufacturer warrants this product to be free from defects in material and workmanship under normal use and service following the date of purchase for 12 months. This warranty shall not apply to damage arising from neglect, incorrect assembly, accidental damage to, or misuse of the product.

Due to our continuing programme of development, Childcare reserves the right to alter the specifications, colour or design without further notice.

Due to variations in the style and design of our products, the illustrations used in this instruction manual are generic.

This product is not intended for commercial use.



Childcare Nursery Products Pty Ltd
20-22 Lindaway Place Tullamarine Vic 3043
Phone: 03 9335 2244 Fax: 03 9335 2270
email: sales@childcare-prod.com.au

www.childcare-prod.com.au

Instruction Booklet

Travel Cot

Insert line diagram here please



Keep this booklet in a safe place for future reference
Note: Colour and features of product may differ from the diagrams shown

www.childcare-prod.com.au

WARNING

- BEFORE ASSEMBLING THIS COT, READ AND UNDERSTAND THE INSTRUCTIONS. INCORRECT ASSEMBLY MAY MAKE THE COT UNSAFE. DO NOT USE THIS COT IF ANY PART IS BROKEN, TORN OR MISSING.

WARNING - MATTRESS SIZE

- This cot is supplied with a mattress which is 740mm wide 1050mm long and 25mm thick.
- Using the wrong size mattress may create hazardous gaps that could result in suffocation or could reduce the side height of the cot, which may result in your child falling out from the cot.

CAUTION FOR THE SAFETY OF YOUR CHILD

- Never leave your child unattended.
- Do not use accessories other than those supplied and approved by Childcare Nursery Products.
- Promptly replace worn out or broken parts.
- Always use the safety locks.
- The travel cot, including side rails and bottom pad, should be fully erected prior to use. Top rails must be completely locked.
- Do not add padding or other objects inside the travel cot, which will permit your child to climb out.
- Do not leave anything in the cot (such as toys) that provide a foothold.
- This cot is supplied with a mattress. Do not add an extra mattress as this may cause suffocation due to a child's head becoming wedged between the mattress and the cot side.
- The thickness of the mattress has been specified to ensure that the distance from the top of the mattress to the top of the lowest side or end will always be at least 500 mm. This will reduce the risk of children falling out of the cot.
- The travel cot is intended for use by a child who is unable to climb out of the travel cot and is less than 86.4cm tall and weighs less than 13.6kgs
- Do not use the cot near naked heat sources, bar heaters, open fires or exposed flames.
- Keep travel cot away from stoves, heaters, campfires and other hazards.
- Discontinue using your travel cot should it become damaged or broken.
- This product is not intended for commercial use.
- The folding cot with padded rims should not be used if the covering materials have been bitten through.
- Do not suspend strings over travel cot or attach to toys.
- Keep the cot clear of trailing cables and hanging cords.
- The mattress must be fastened onto the base to avoid suffocation hazard.
- Keep medication, and small items that a child could choke on away from the cot.
- Retain your warranty and keep your sales receipt to provide proof of purchase.

How to care for your Childcare Product

Care and Maintenance

To prolong the life of your nursery product keep it clean and do not leave in direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water and a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

Do Not Dry Clean or Bleach Your Fabrics

Do not machine wash, tumble or spin dry your fabrics, unless the care labelling on the product permits these methods.

Non-removable fabrics covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well-ventilated area.


Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Childcare Nursery Products.

This product is not intended for commercial use.

6. Wrap mattress pad around travel cot and fasten the three velcro tabs



7. Place travel cot into bag and zip together.

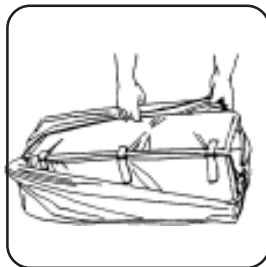


8. The travel cot is now ready for easy carrying or storage.




To Set up the Travel Cot


1. Unzip the bag and remove the travel cot standing it in an upright position.

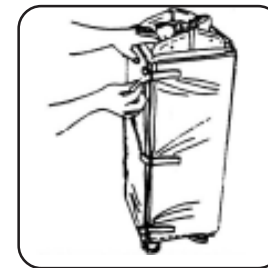

2. Un-hook the three velcro tabs on the outer side of the mattress.

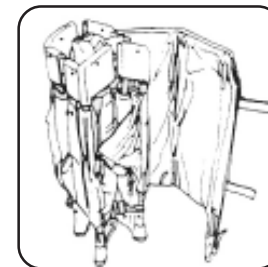


3. Remove the padded mattress.

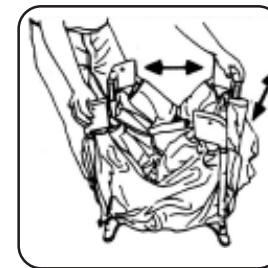


4. Separate the four corner posts.


5. Lift the four side rails upwards from the middle until each locks into position.

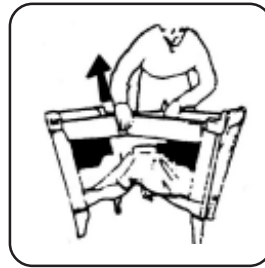

6. Push down the centre support until it locks into position. Check and ensure all the locking devices are fully engaged. If not, lift the centre support and repeat step 5 & 6.

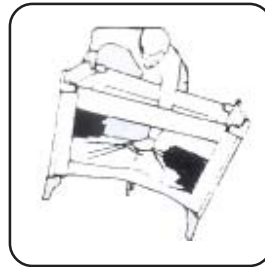

7. Lay mattress pad on the floor of the travel cot, soft side up. Check the assembly of the cot is correct and safe.

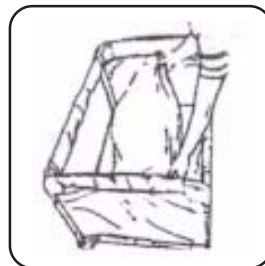

8. Fix the velcro fasteners under the mattress onto the cot base, via the two holes in the cot base. Your travel cot is now ready to use.


WARNING: Always apply brakes before placing your child into travel cot (if wheels supplied)

To Fold the Travel Cot


1. Unfasten the velcro fasteners underneath the cot, and remove mattress pad.




2. Grasp centre handle: pull up to its highest point. Use care as it may release forcefully.

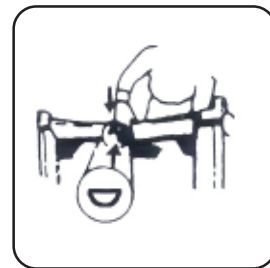

3. Lift the top rail, and squeeze the outside buttons of the centre joint until side rails release downwards. Repeat for each side rail.

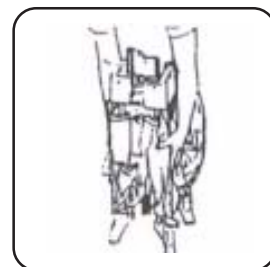

4. Gather unit together.

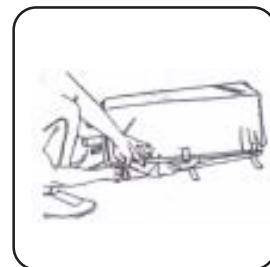

5. Lay mattress pad on floor - soft side up and lay cot on mattress pad.