

Jeep® Urban Rider Portacot Instructions



Jeep®

by **bornwithstyle**

AVOID HEAT EXPOSURE HAZARDS:

To avoid over-heating your child:

- Keep product out of direct sunlight.
- Turn mesh sides away from direction of sun.
- ALWAYS keep entire floor pad shaded from sunlight

AVOID OTHER HAZARDS:

- DO NOT use the cot near naked heat sources, bar heaters, open fires or exposed flames.
- Keep medication and small items that a child could choke on away from the cot.
- The thickness of the mattress has been specified to ensure that the distance from the top of the mattress to the top of the lowest side or end will always be at least 500mm. This will reduce the risk of children falling out of the cot.

How to Assemble Your Portable Cot

To Open Portable Cot

WARNING

- Failure to lock all 4 top rails in upright position and lock centre floor handle can result in death by suffocation.
- Infants can suffocate:
- In gaps between the side of the product and either an extra mattress or a mattress too small or too thick.
- On soft bedding. **NEVER** add a mattress, pillow, comforter or padding. Use only mattress/pad provided by manufacturer.
- **NEVER LEAVE** infant in product with sides down. Infant may roll into space between pad and loose mesh causing suffocation.

- 1 Remove any cardboard inserts or plastic ties used to protect the product during shipment.



2

- 2 Stand the portable cot upright. Undo velcro straps on floor pad and remove floor pad from unit.



3

- 3 Pull up sharply on centre floor handle to make sure floor joints are unlocked. Handle must be even with top rails.

4



4

Lift each top rail until it locks.

- Top rails automatically lock when lifted fully.
- Top rails cannot lock if the floor is flattened first.
- If one or more of the top rails will not lock, pull sharply on centre floor handle to make sure floor joint(s) are unlocked.
- Check that all four top rails are locked proceeding to Step 6.

5



5

Push down floor and fold floor handle over. Floor handle will lock automatically.

6



6

Install floor pad, padded side up. Thread velcro straps through floor and fold over under the floor. Repeat for all corners.

Do not use portable cot without floor pad.

Inspect Portable Cot Before Use

IMPORTANT: Always use this illustration to inspect the portable cot before use.



1

Push down on all 4 top rails to make sure they are locked (“A” on illustration).

2


Push down on all 4 floor joints and the floor centre to make sure they are locked and floor is completely flat (“B” on illustration).

To Fold Portable Cot

IMPORTANT: Top rails cannot be unlocked first.

1 Remove portable cot floor pad.

2

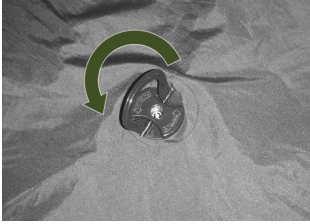

2 Take hold of handle and turn handle to vertical position and pull upright to unlock floor. Handle should be even with top rails.

NOTE: A sharp fast pull will release floor locks.

3



3 Locate centre of each top rail. Lift and squeeze centre of top rail to release lock. Then push down on top rail while continuing to squeeze.

NOTE: To fold, top rail must be lifted to release lock. Top rail cannot be pushed in until the lock joint is lifted. If top rail will not unlock, pull up sharply on centre floor handle to make sure ALL floor rails are unlocked. Handle must be even with top rails.



4 Repeat for all sides.

5



5 Pull handle to bring floor completely up and gather legs together.

NOTE: To fold compactly, the centre of the portable cot floor must be pulled all the way up.

To Pack Portable Cot

1



1

Lay floor pad flat on the floor, padded side up and place folded portable cot off centre on second floor panel as shown.

2



2

Wrap floor pad around folded portable cot. Thread velcro straps through rings on floor pad.

3



3

Pull bag down over portable cot. Zip travel bag.

Trouble Shooting Guide

1

Top rails fail to lock into an upright position.

Centre of floor must be raised up to level of top rails.

A sharp pull on the centre floor handle will release floor locks allowing the top rails to be locked upright.

If necessary, hold the centre floor handle with one hand and lock rails one at a time.

2

The floor joints do not flatten.

Turn portable cot upside down and make sure floor joints are free from foreign objects.

3

Top rails do not unlock to fold.

Centre of floor must be raised up to level of top rails.

A sharp pull on the centre floor handle will release floor locks allowing the top rails to be unlocked.

Lift top rail first, then squeeze to release lock.

4

Floor joints do not unlock.

Raise centre floor handle up to the level of the top rails to unlock floor joints.

5

Folded portable cot does not fit into floor pad and it is difficult to attach velcro straps.

Pull centre floor handle outward (toward corner caps) and push legs inward to compact portable cot.

Shift portable cot lower on pad or turn slightly and try again. (see illustration on page 14 for proper placement of portable cot for folding).

Care & Maintenance

There are many ways to look after and protect your Jeep® portable cot. The most important is to clean up any spills or food, before it dries on the fabric.

Wipe surfaces clean using water and mild bleach free soap. **DO NOT** use scouring powders, or abrasive cleaners. Wipe dry using a soft, clean cloth or air dry.

Warranty

Jeep® is a registered trademark of DaimlerChrysler Corporation, and is used under license by Born With Style. ©DaimlerChrysler Corporation 2007.

Born With Style warrants this product to be free of defects in materials and workmanship as follows: For a period of ONE YEAR from the date of purchase, Born With Style will repair or replace, at its option, the defective product. This warranty is given in addition to (and not in substitute for) applicable statutory rights which you may have.

We sincerely thank you for purchasing this Born With Style product.

For further information visit: www.bornwithstyle.com.au

Contact Details

No refunds will be given on used product unless assessed by Karlises as faulty. For all spare parts, repairs or warranty issues, please take your product back to Toys R Us who will contact Karlises, the service agent on your behalf.

For all spare parts, repairs or warranty issues, please contact:

Karlises

Phone: 1300 308 435
Email: info@karlises.com.au
Web: www.karlises.com.au

Replacement parts provided by local distributor due to accidental damage or misuse will be charged accordingly.

To contact the manufacturer directly:

Born With Style

PO Box 789
Gladesville NSW 1675, Australia
Phone: 1300 855 337 or 02 9816 3837
Email: info@bornwithstyle.com.au
Web: www.bornwithstyle.com.au

This product meets and exceeds Australian Standard AS/NZS 2195:1999

Personal Record Card

Born With Style recommends that you keep a record of important information about your Jeep® stroller. Please complete the information in the space provided.

Model Number:

Date of Manufacture:

Date of Purchase:

